


Grandview

Telescopic rod projector lift installation manual

Model: GPCD50 Series

Grandview

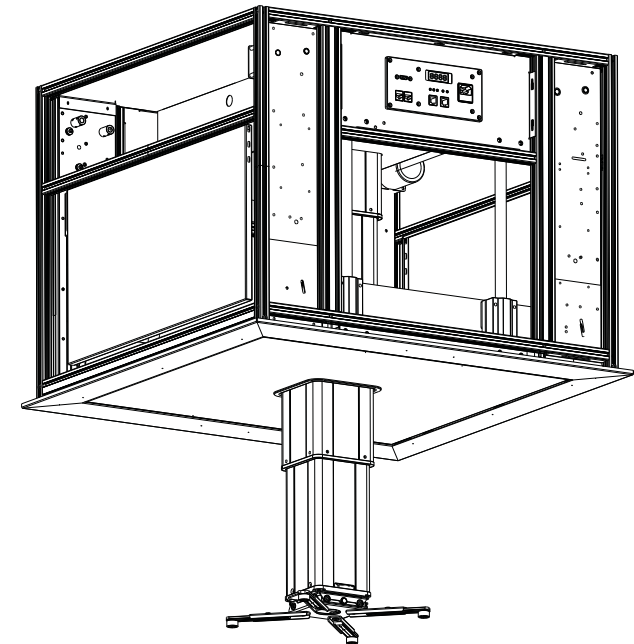

Grandview Crystal Screen Guangzhou Co.,Ltd.
Guangzhou Jude Intelligent Audiovisual Equipment Co.,Ltd.
No.43S, Guomao Ave. Hualong, Panyu, Guangzhou, Guangdong, P.R.C
<http://www.grandviewscreen.com>
After-sales service Tel:020-84899499



Thank you for purchasing this product. Please read the manual carefully before use.
Please read the collection after reading for future reference.

FAQ

The design of this product can be used without failure for many years, many problems are caused by simple things. If something goes wrong, check out our simple fix list. If the problem continues, please contact the authorized dealer or call the after-sales service number: 020-84899499-509

Trouble	The cause of the trouble	The solution
The elevator is fully installed but not working properly	Positive and negative electrode of generator battery is installed backward or the battery power is insufficient	Check whether the battery is installed backward according to the instruction. If the fault is not removed, please replace the battery
	The power cord is not properly connected	Connect the power cord according to the instruction
Remote control doesn't respond	Bad reception/The signal block	Restart the lift power supply
Positioning confusion	Line problem	Contact factory or distributor
Layer board	Motor heating protection	Wait for motor cooling
Close the door shake	The adjustment screw becomes loose during transportation	Refer to picture 9 for a slight clockwise half turn
Open the door shake	The adjustment screw becomes loose during transportation	Refer to the yellow mark in picture 9 and turn it clockwise slightly for half a turn

Left and right corresponding door panel adjustment indication diagram:

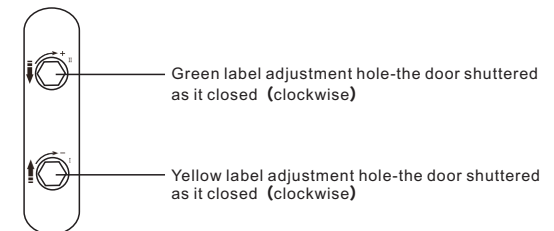
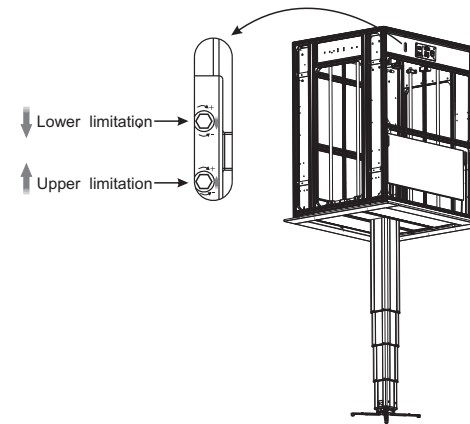







Figure 9

Caution

1. **Please ensure the installation ceiling be secure enough to avoid falls, The loading capacity must be 4 times of the projector lift and the projector.**
2. Please tighten all the screws and check whether it become loose regularly, to ensure safety use.
3. Please do some regular maintenance.
 - A. When dirty mark there, please gave the lift a polish with a soft duster.
 - B. When dust there, please remove with soft brush.
4. Kindly suggest a specialist to manage this device, then ensure security and smooth use.
5. Please ensure the lift up and down via Remote control, no pulling with hands.
6. Always retract the lift to the ceiling after use.
7. Ensure the power outlet is connecting with grounding wire.
8. There is no need to add the lubricant to the motor. Do not regulate the motor by yourself, the motor is already in the right position before delivery, Please call a specialist to help you on this when it is in needed.




 <p>Please do read the caution, incorrect operation will cause accident and product damage.</p>	 <p>Please install the lift in the place with stronger loading capacity, otherwise accident may happen and falling risk there.</p>
 <p>When the lift is fully lowered, the bottom of the lift should be no less than 1.8 meters away from the ground to avoid being touched by children.</p>	 <p>Do not take apart the lift by yourself, Please call a specialist to help you on this when Fix and regulating job in needed</p>
 <p>Please always retract the lift to the ceiling after use, prevent the dust entering.</p>	

Components


GPCD50 Series Projector Lift

1. Control panel
2. Electric ceiling door
3. Ceiling bezel
4. Telescopic Arms
5. Projector mounting Bracket

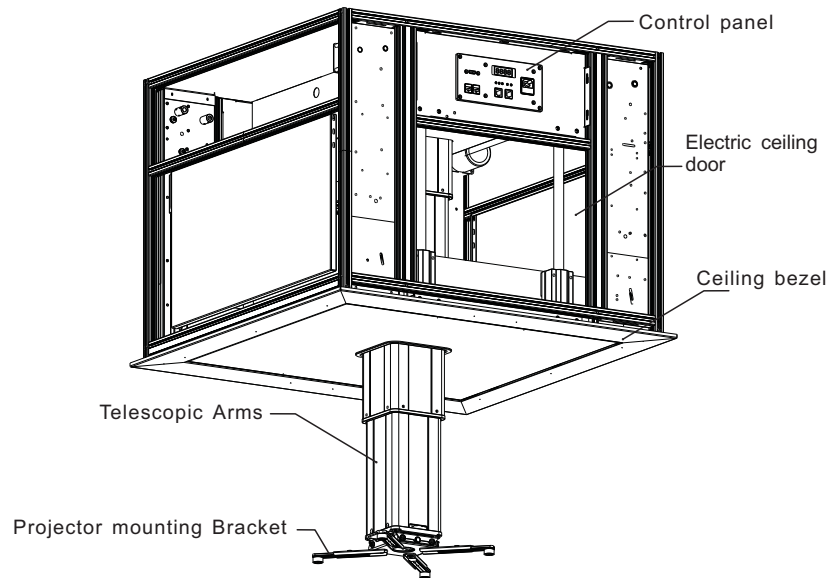

Accessories

- | | | | | | |
|------------------------|------|-------------------------|------|------------------------|------|
| ■ AC 097 remote | 1pcs | ■ Certification | 1pcs | ■ Warranty Card | 1pcs |
| ■ Manual | 1pcs | ■ 4x25 Cross head screw | 4pcs | ■ 5x25Cross head screw | 4pcs |
| ■ 6x25Cross head screw | 4pcs | ■ Φ 20x10washer | 4pcs | ■ Hexagonal Adjuster | 1pcs |
| ■ Safety rope | 4pcs | | | | |

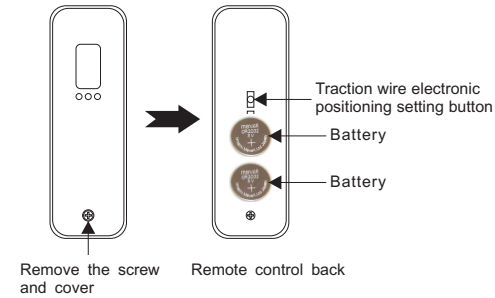

Remote control Notes


1. Working temperature: -20°C to $+70^{\circ}\text{C}$
2. Battery: 2 pcs of RC2032 button battery
3. Requires replacement battery when given signal weak

Battery installation:


When remote control signal weak, please replace it as following:

1. Remove screw and cover on the back of remote
2. Install battery in correct direction of positive and negative pole according to picture.
3. Reinstall cover and screw

Remote control learning mode

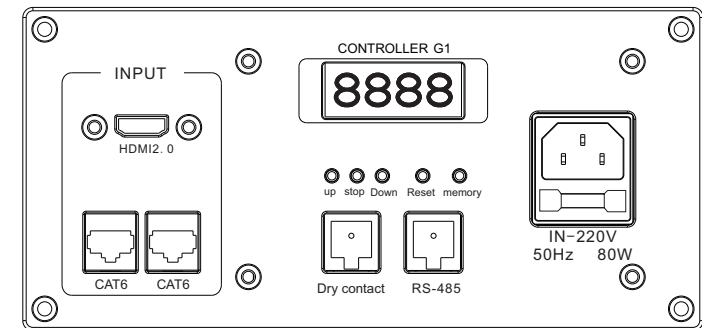

Picture 8

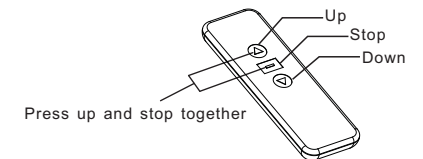


GPAD58 Series projector lift remote control pairing notice:

This product has learning and pairing function. Please enable learning function when first use remote to control the projector lift.
(This product has been paired and learned before EXW)

1. Picture 8, when projector lift is under loading status, long press stop on the control panel within 5 seconds after switched on. When number display screen flicker, this product is under learning mode.
2. Press up and stop on the remote control until the projector lift slight move upwards and downwards.
3. Test if the remote could control the product properly, if not, try to pair again.

Rs485 Port Setting:

Bit Rate: 2400
Data bit: 8 bit
Odd check: N/A
Stopping position: 1

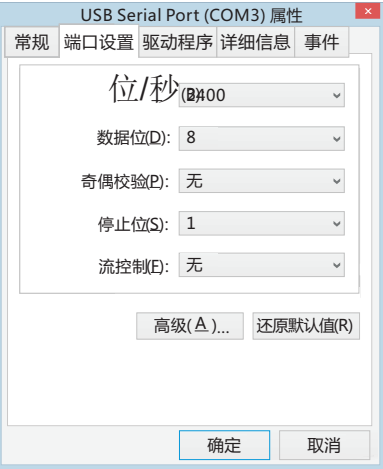

Hexadecimal control code:

UP : ff,ee,ee,ee,dd
STOP : ff,ee,ee,ee,cc
DOWN : ff,ee,ee,ee,ee

Some center console need setting address:ff,ee,ee,ee,aa


Notice:

- 1. When connecting via RS232 or RS485, if any control fails, please switch two controlling cable.
- 2. Connecting Loop Resistance Tester should not be over 20Ω
- 3. Prohibit parallel line with strong interference source



Remote controller

Control button instruction

- 1.Press UP to lift
- 2. Press STOP to stop
- 3. Press DOWN to lower

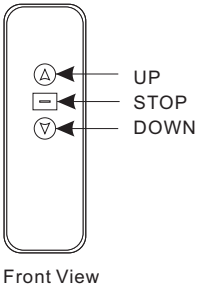

Specification

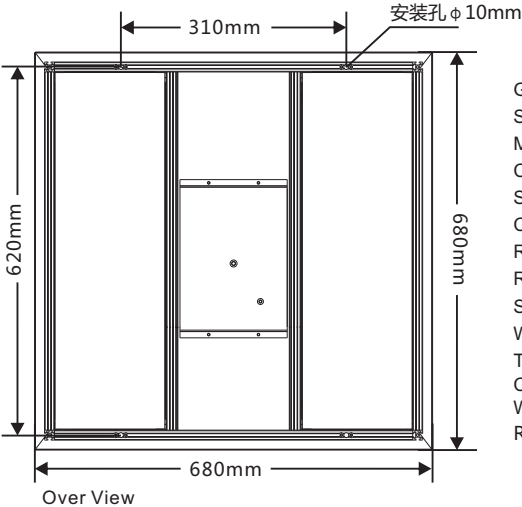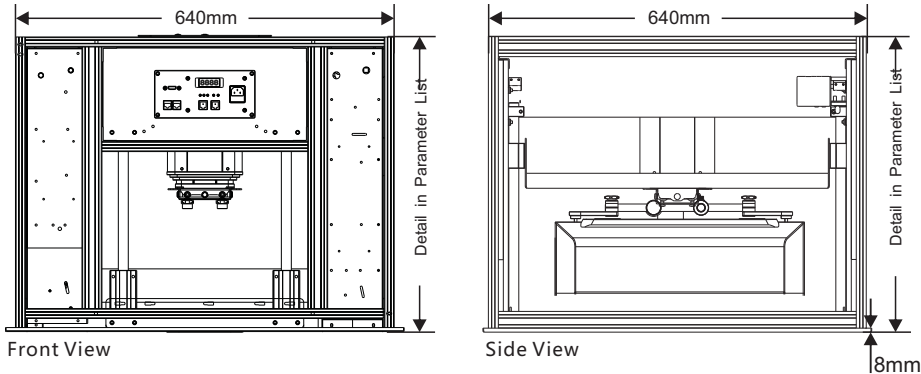

GPCD50 Series :
Size : 640x640xH mm
Max Load : 15kg
Ceiling Hole Opening Size : 655x655 mm
Screw Rod Installation Size : 310x620 mm
Ceiling door Dimension : 680x680 mm
Rated Voltage : 220V 50Hz
Rated Power : 120W
Suitable for projector size :
W440XD480XH240 mm (Including wiring and lens)
The noise : ≤55dB
Control mode:
Weak current dry contact/RS-485/Wireless RF
Required ceiling height : H+50mm

GPCD50 detail specification


Modle	Overall size (W*D*H)mm	Mounting Hole (W*D)mm	Ceiling opening size (W*D)mm	Suggestion Projector Size Range (W*D*H)mm	Quantity of Telescopic Arms
GPCD5004	640x640x590	310x620	655x655	440x480x240	4
GPCD5009	640x640x860	310x620	655x655	440x480x240	4

Installation

Installation instructions

This projector lift needs to be recessed into the ceiling, and this instruction takes the grille-ceiling as the example. Please install the projector lift according to different application. The projector lift needs to be recessed at the best viewing angle in order to improve the image. Take out all the parts from the packaging and follow the installation instructions as below.

* For the convenience and safety, please read this instruction manual carefully and choose a installation according to your requirement.

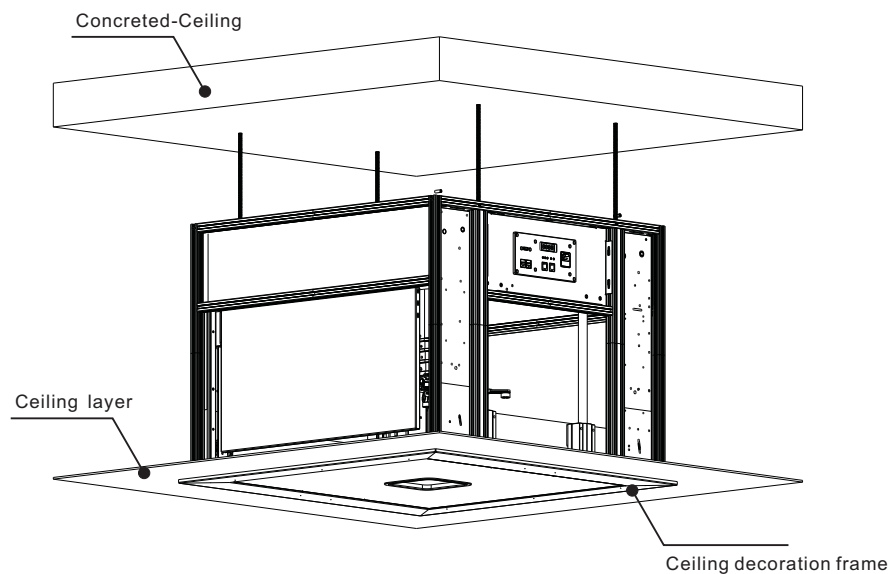


(Installation drawing)

Warning: The top plate must be kept parallel when installing, otherwise it will cause damage to the lift.


Remote Localizer

When it is necessary to set the lower limit, open the electric double door. When the laminate reaches the ceiling, press the pause button to use the keyhole on the back of the remote control. When the needle is inserted into the blue light, the hanger will enter the preset state and reach the position required by the customer. Press the stop button and insert the needle into the back of the remote control again. When the small hole light is off and the hanger moves slightly up and down once, the setting is completed.

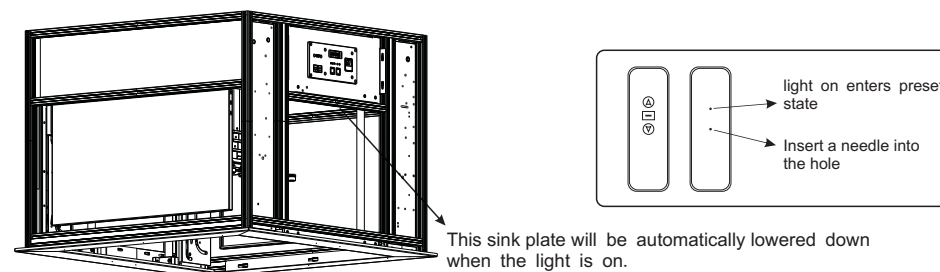


Central Control Instruction : requires a professional installation or contact us.


RS-485 plug: 7 for + / 8 for -

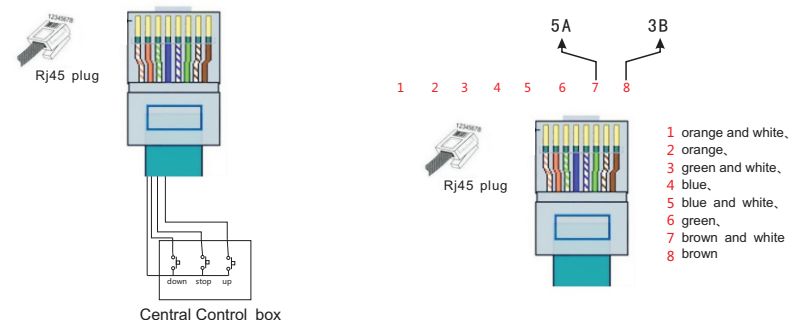


RJ45 wiring instruction

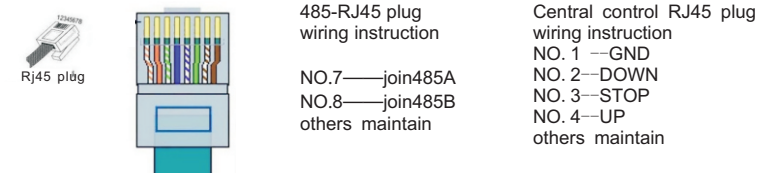


Angle adjustment

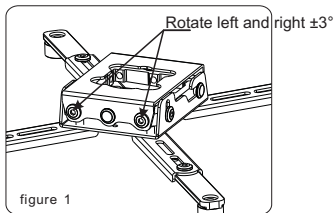

1.Rotate left and right
Use a hex wrench to loosen the two screws on the front end.
As shown by the arrow in Figure 1, the universal joint can be adjusted to the left and right by $\pm 3^\circ$.

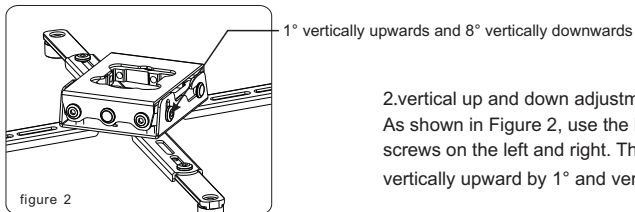

2.vertical up and down adjustment
As shown in Figure 2, use the hex wrench to loosen the two screws on the left and right. The universal joint can be adjusted vertically upward by 1° and vertically downward by 8° .

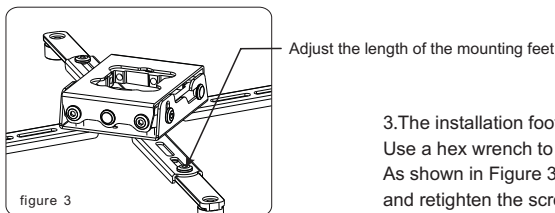


3.The installation foot adjustment
Use a hex wrench to loosen the screws on the mounting feet.
As shown in Figure 3, adjust the screws to the desired length and retighten the screws.

Electrical, product instructions


Control panel description

Up: Electric hanger rises
Stop: electric hanger stops
Down: electric hanger drop
Communication port: Category 6 network port
Dry contact: dry contact interface RS485: RS485 interface
Power input: power input interface
Fuse: F6. 3A 250V
Reset: long press the reset button to adjust the height
Memory: electric hanger memory position height
HDMI 2.0: 19+1 2.0 HD interface
Digital display: electric hanger current screw telescopic height

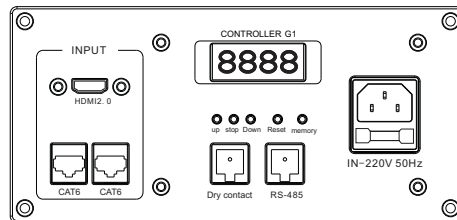


Installation steps

1.determine the direction of the projector and the installation position, according to the size of the opening in the ceiling layer.

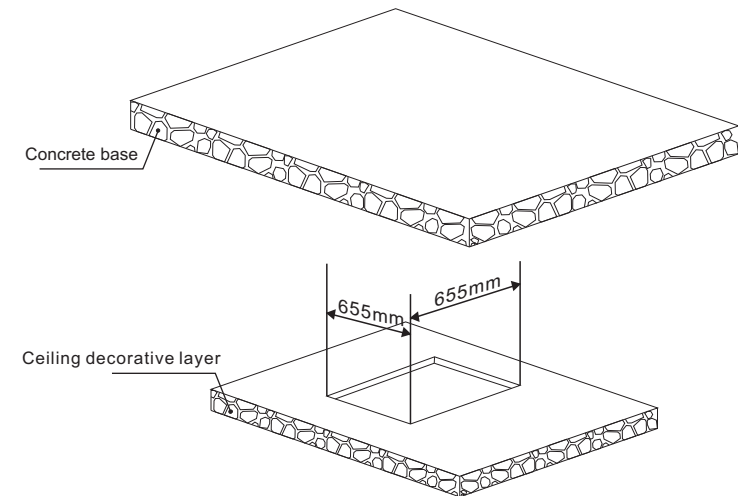


(Ceiling opening size diagram)

2.Punch the concrete base and install the Tapping screws.

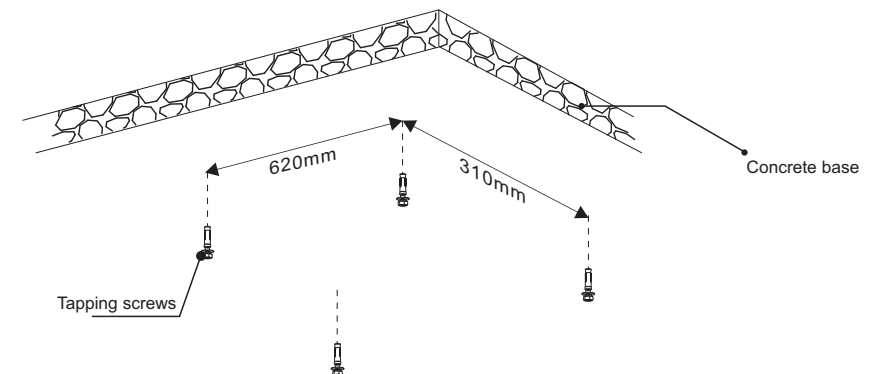


3. After checking that the tapping screw is fixed, install the screw rod and fix it. (In order to make the screw rod easier to pass through the lifter, we recommend that the end of the screw rod be tapered, and the length between each two lead rods can differ by 10-20mm.)

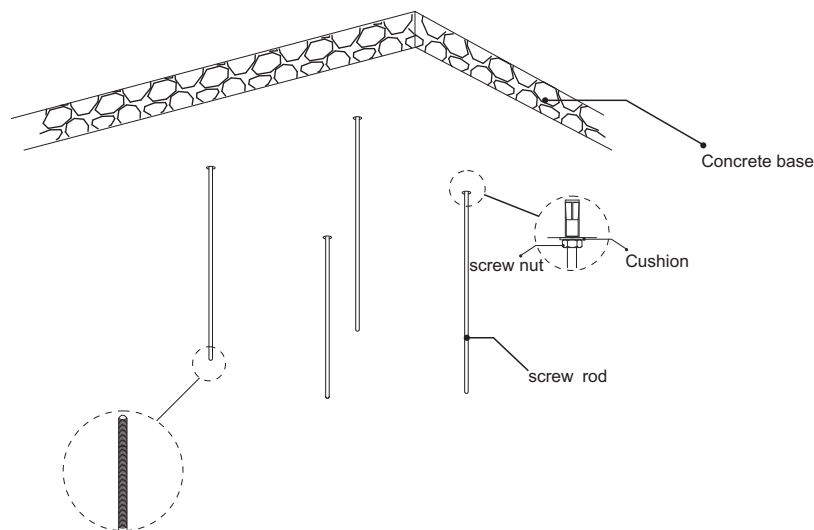


recommended to sharpen the end of the screw into a taper that makes it easier to pass through the screw hole of the lift

4. Lift the lifter to the height of the installation position by using the lifting equipment, and pass the screw rod through the four holes of the lifter. Adjust the height of the lifter with the screw nut so that it is flush with the height of the ceiling layer. Remove the excess screw rod.

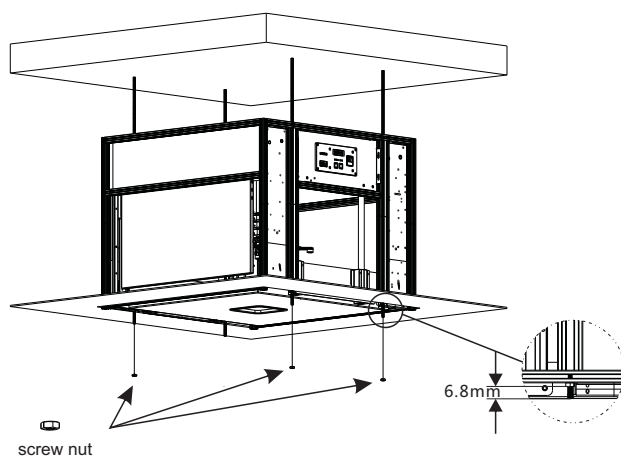

5. Install the decorative frame so that the decorative frame fits on the ceiling layer and the installation is completed.

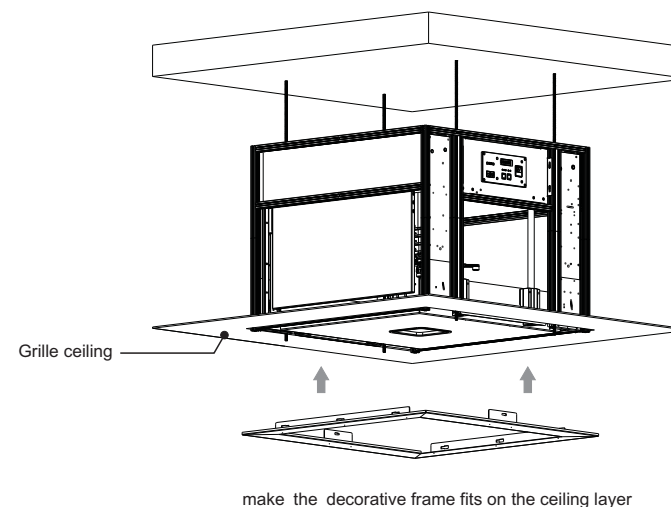

- Please note that you must touch the upper limit switch to stop the projector lift from rising!
- The level above the electric lift must be adjusted to the level, Tilting can cause the electric hanger to malfunction.

For the convenience of installation, the side plates of the cage can be removed first. After the installation is completed, the installer can stand in the cage and reinstall the side panels. At this time, the side panels must be turned over and installed.

If it is necessary to adjust the limit height due to the installation environment or the limitations of the site, it must be adjusted by a special technician or call after-sales.

Projector installation

1. Lower the bamboo joint of the lift to the height suitable for the installer to install the projector, and remove the mounting feet on the bamboo joint.
2. After the mounting feet are fixed on the projector, re-attach the projector and the mounting feet to the angle adjuster and tighten the screws.

(Note: Be sure to confirm that the screws are securely locked, be careful to prevent the projector from accidentally falling!)

