

Grandview[®]

Hidetech A Series Recessed Motorized Screen Installation Manual

Model: HT-MI xxx 、 HT-MF xxx

Grandview[®]



Guangzhou Grandview Creative Technology Co., Ltd
Add: No.1 Building of No.43 South International Trade Avenue, HualongTown,
Panyu District, Guangzhou China.
Tel: +8620-8489-9499 Fax: +8620-8480-5299
Web: www.grandviewscreen.com



Thank you for purchasing a Grandview product.
Before use, please read this manual carefully and keep it for future reference.

Precautions

- The ceiling or wall used for installation must have sufficient load-bearing capacity to prevent the screen from falling.
- Dirt or scratches on the screen surface may affect image quality. Please observe the following precautions:
 1. Do not touch the screen surface with your hands.
 2. Do not write or draw on the screen surface.
 3. Do not puncture or scratch the screen fabric with fingers or sharp objects, as this may cause permanent damage.
 4. Do not use thinners, solvents, or other corrosive cleaning agents to clean the screen fabric.
- After use, always retract the screen completely into the housing.
- For wall-mounted installation, ensure all mounting points are level so that the screen remains properly aligned when fully deployed.
- Do not pull the sides of the screen fabric by hand. Folding the screen fabric is strictly prohibited.
- To avoid unnecessary injury, installation, operation, and maintenance should be performed by adults only.

Important Notice:

- Before retracting the screen into the housing, ensure the screen surface is free from dust, insects, or foreign objects.

 Warning	 Mandatory
 Do Not Hang Objects	 Mandatory
 Do Not Disassemble	

Note: Users must not disassemble or replace any components without authorization. If a malfunction occurs, please contact the service department for repair. Product functions and structures are subject to change without prior notice.

Operation Guidelines

D. Dry Contact Control

When using an RJ45 8P8C connector, pins from left to right are:
Pin 3 = Stop, Pin 4 = Up, Pin 5 = Down, Pin 8 = Common (see Fig. 17).

E. DC12V Trigger Control

For DC trigger control via RJ45 8P8C connector: Pin 6 = DC 12V+, Pin 7 = DC 12V- (see Fig. 17).
When DC 12V is applied, the screen deploys; when DC 12V is disconnected, the screen retracts.



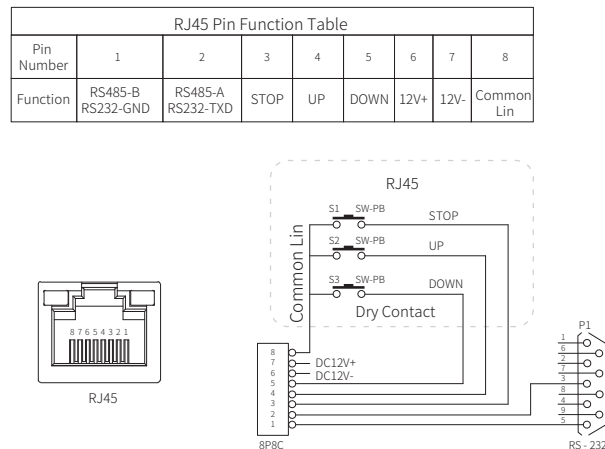


Figure 17

Screen Structure Diagram

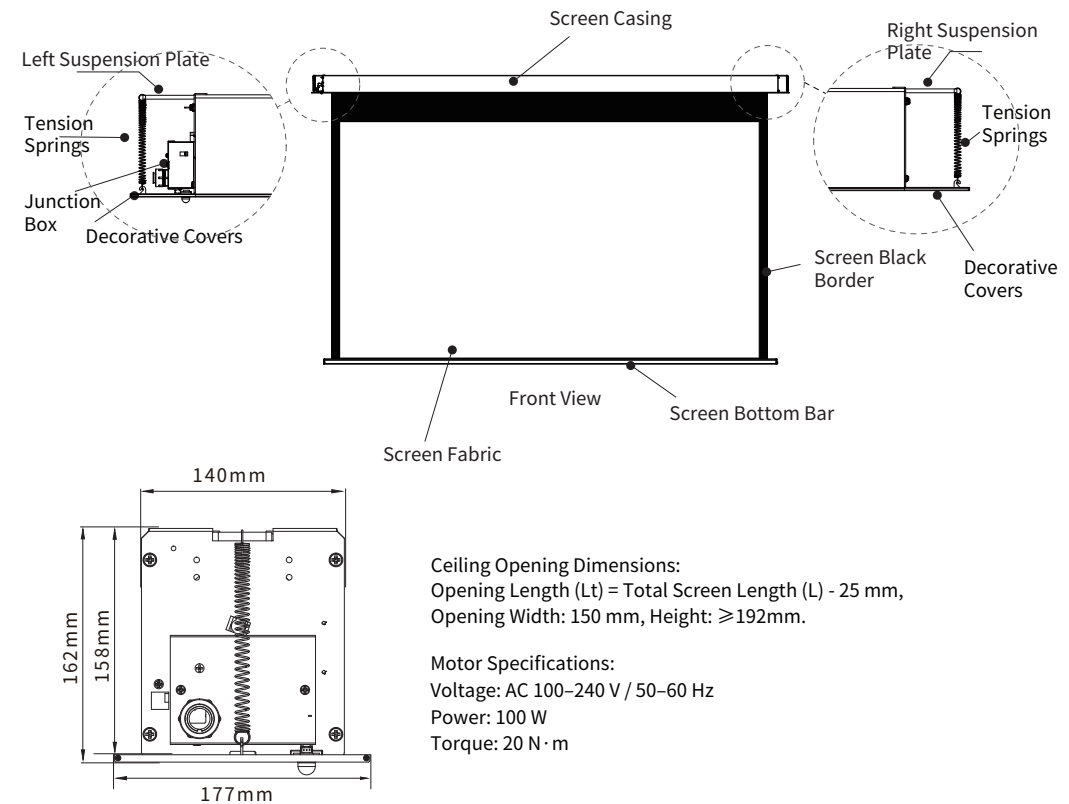



Accessory Diagram

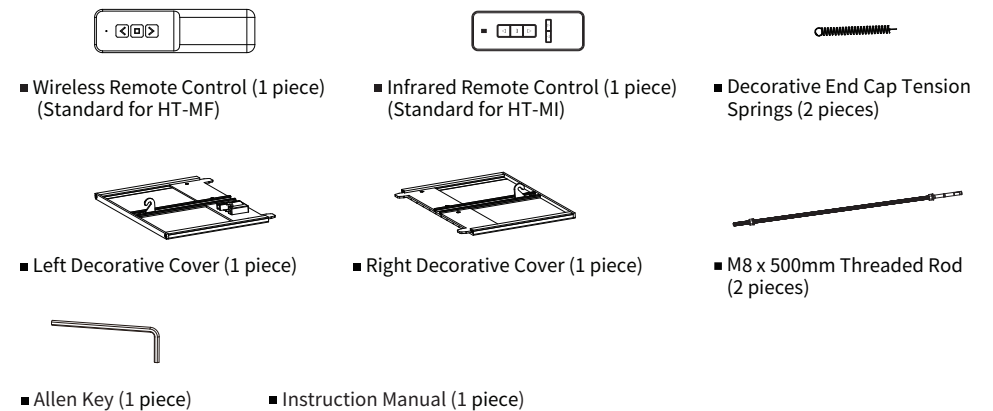


Installation Steps

Concrete Ceiling Installation:

Confirm the installation distance based on the position and height of the ceiling opening, drill vertical installation holes, insert expansion screws, screw the rod into the expansion screw, and fasten the rod. Cut the rod to the vertical distance from the installation wall to the ceiling decorative surface: 80-90mm.

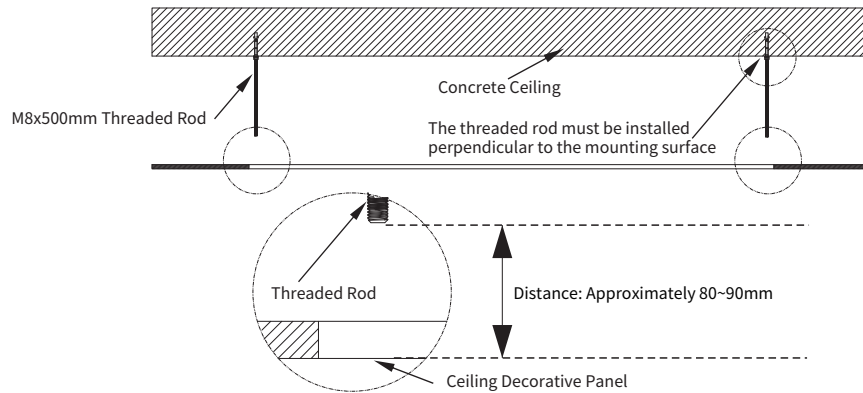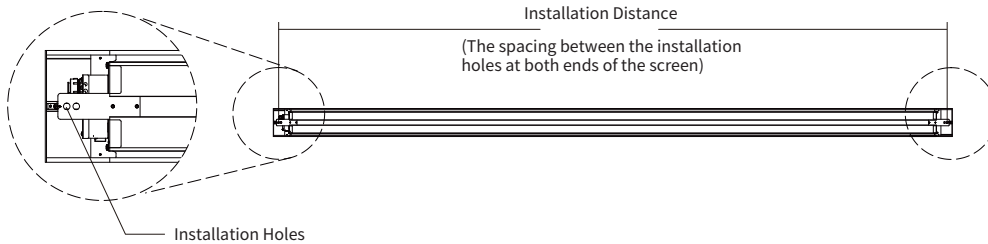

- Lift the screen with caution, guiding the threaded rod through the suspension holes on each side. Attach and secure the screen with nuts and washers, then use tools to evenly tighten the nuts on both sides until the screen is firmly positioned against the ceiling.

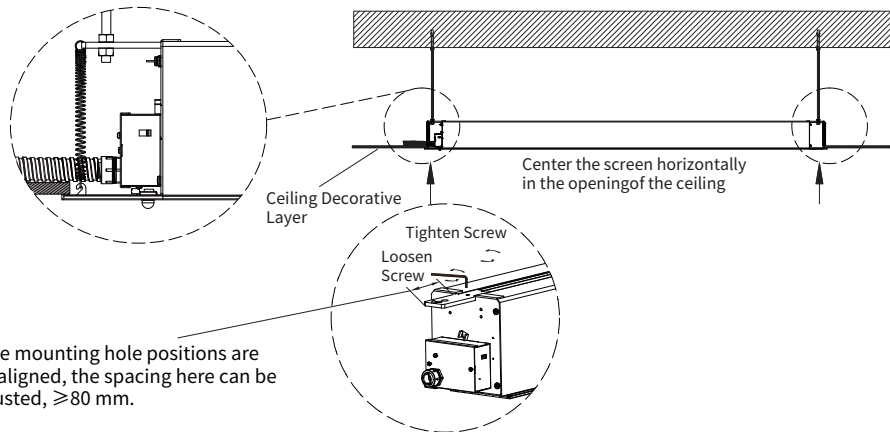

Operation Guidelines

C. RS485/RS232 Control:

The control output port is connected to an RJ45 (8P8C) plug, with lines 1 and 2 being the control lines. For RS485 control connection, line 1 is D-, and line 2 is D+. For RS232 control connection, please refer to the diagram shown: Figure 16.

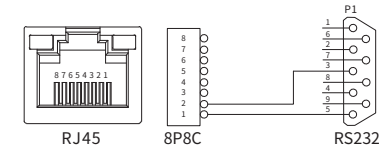


Figure 16

RS485/RS232 port settings:

- Baud Rate: 2400
- Data Bits: 8 bits
- Parity: None
- Stop Bits: 1

Hexadecimal Control Codes:


- Retract: FF EE EE EE DD
- Stop: FF EE EE EE CC
- Extend: FF EE EE EE EE
- Some central control devices require an address code to be set: FF EE EE EE AA
- Address Learning Command: FF XX XX XX AA (XX XX XX represents any hexadecimal characters except E and 5)

Note:

When connecting RS232 or RS485, if the screen cannot be controlled to perform related actions, please swap the two control lines.

The wiring loop resistance should be less than 20Ω.

Do not run wiring parallel to strong interference sources.

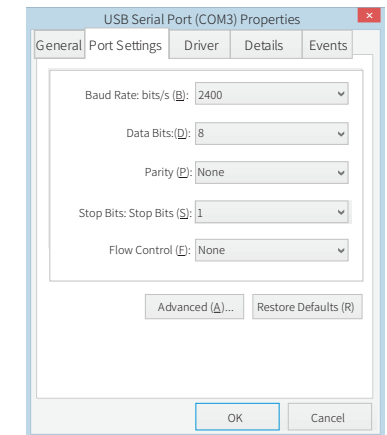

Operation Guidelines

● Remote Usage Notes:

1. Point the remote at the screen's left end cover infrared receiver (effective range: ~8 meters).
2. Remote effective angle: $\pm 30^\circ$ from the transmitter axis (Figure 11).
3. Receiver effective angle: $\pm 30^\circ$ from the receiver axis (Figures 12–13).
4. Do not block the remote's transmitter or screen's receiver.
5. Infrared signals travel in straight lines; ensure no obstructions.
6. Avoid humid or high-temperature environments.
7. Replace batteries if the remote range decreases or the indicator dims.

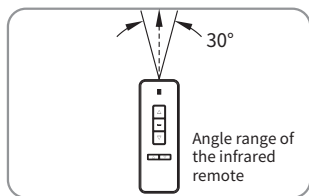


Figure 11

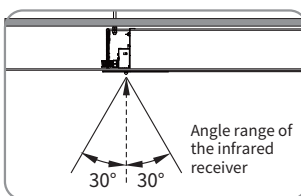


Figure 12

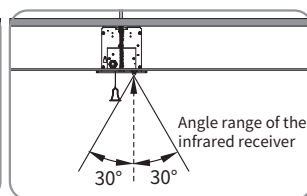


Figure 13

● Battery Installation:

When the remote signal weakens, replace the batteries (2x CR2032 button cells). Do not mix old and new batteries.

1. Turn the remote over and slide the battery cover open (Figure 14).
2. Insert batteries according to the polarity markings (Figure 15).
3. Close the battery cover.



Figure 14

 


Figure 15

● Electronic Limit Setting (Infrared Remote Control)

Open the back cover of the infrared remote control. Use a pin to briefly press the “Set” button on the back of the remote control (see Fig. 10). The blue LED will flash once, and the screen will jog up and down once to indicate that setting mode has been activated.

1. Lower Limit Setting

After entering setting mode, lower the screen to the desired position and press the Stop button. Then press the Stop and Down buttons simultaneously. The screen will jog up and down once to confirm that the lower limit has been set.


2. Upper Limit Setting

After entering setting mode, raise the screen to the desired position and press the Stop button. Then press the Stop and Up buttons simultaneously. The screen will jog up and down once to confirm that the upper limit has been set.


Installation Steps

Wiring and Decorative Cover Installation


- Before installing the screen, remove the junction box cover and prepare the wiring as shown.

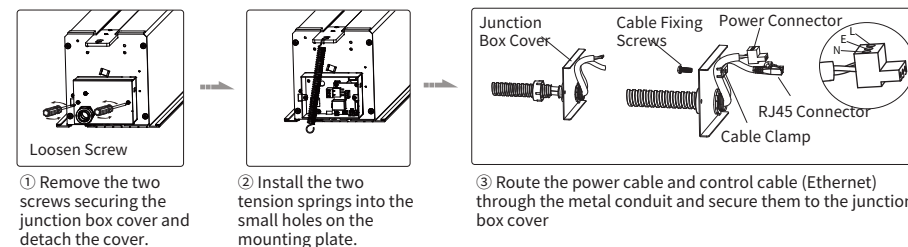


- After the screen installation is complete, connect the power and control cables to the control board, then reinstall the junction box cover.

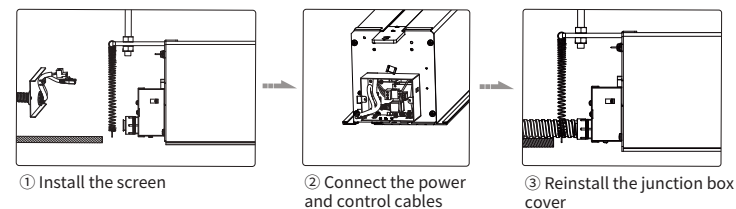

- The hook position on the decorative cover can be adjusted as follows.

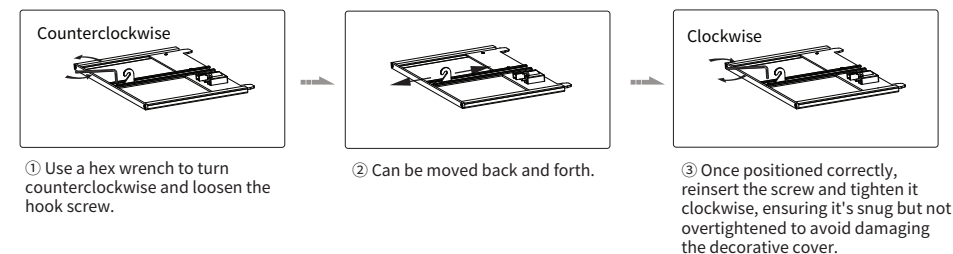

- Install the left decorative cover on the end with the power cord by following the illustrated steps below. The procedure for installing the right decorative cover mirrors this process.

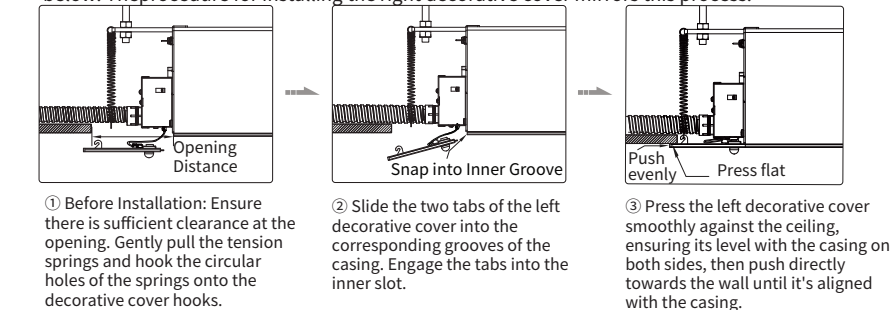

Operation Guidelines


This electric projection screen supports multiple control methods. Choose the one that suits your needs:

- A. Wireless RF Remote Control
- B. Infrared Remote Control
- C. RS485/232 Control
- D. Dry Contact Control
- E. DC12v Trigger Control

A. Wireless RF Remote Control

AC157 Wireless Remote Control — Button Functions

1. Press the Up button, screen retract to set position.
2. Press the Stop button, screen will pause.
3. Press the Down button, the screen will extend to set position.

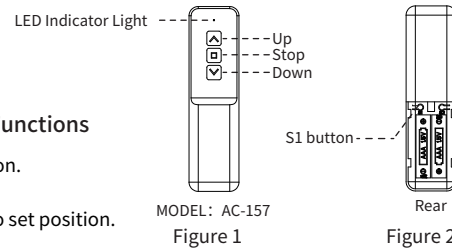


RF Remote Operating Instructions

1. Operating Frequency: 433.92 MHz
2. Operating Temperature Range: -20°C to +70°C
3. Battery Type: Two AAA 1.5V dry batteries
4. Battery Replacement: Replace the battery promptly when the remote signal becomes weak to ensure proper operation.

Remote Control Battery Installation

When the remote signal weakens, replace the battery as follows:

1. Slide open the battery cover on the back of the remote (Figure 3).
2. Insert the battery according to the indicated polarity (Figure 4).
3. Close the battery cover.

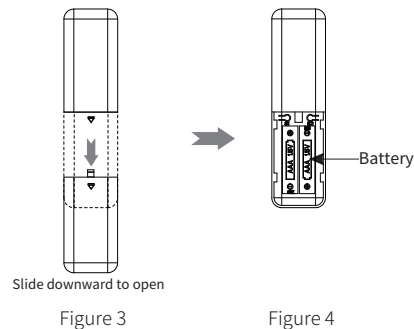


Operation Guidelines

● Remote Control Pairing (Factory Paired)

Disconnect power, wait 10 seconds, then reconnect.
The screen jogs once to indicate power-on.
Within 10 seconds, press Stop + Up simultaneously.
The screen jogs again to confirm pairing.

Note:
Odd attempts = Pairing
Even attempts = Unpairing

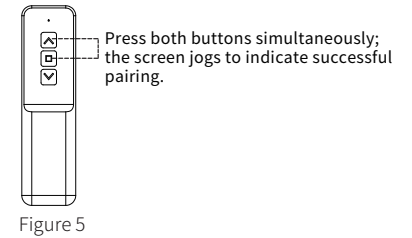

● Electronic Limit Setting (Wireless Remote Control)

Open the back cover of the wireless remote control. Briefly press the “S1” button on the back of the remote control (see Fig. 6). The screen will jog up and down once to indicate that setting mode has been activated.

1. Lower Limit Setting


After entering setting mode, lower the screen to the desired position and press the Stop button. Then press the Stop and Down buttons simultaneously. The screen will jog up and down once to confirm that the lower limit has been set. (Wireless remote: see Fig. 7)

2. Upper Limit Setting

After entering setting mode, raise the screen to the desired position and press the Stop button. Then press the Stop and Up buttons simultaneously. The screen will jog up and down once to confirm that the upper limit has been set. (Wireless remote: see Fig. 8)

Note:

- The upper electronic limit is factory preset to an optimal position and typically does not require adjustment.
- In setting mode, the screen operates in step mode. Short-press the Up or Down button for incremental movement; press and hold for 2 seconds for continuous movement.
- If no operation is performed within 30 seconds, the system will automatically exit setting mode.

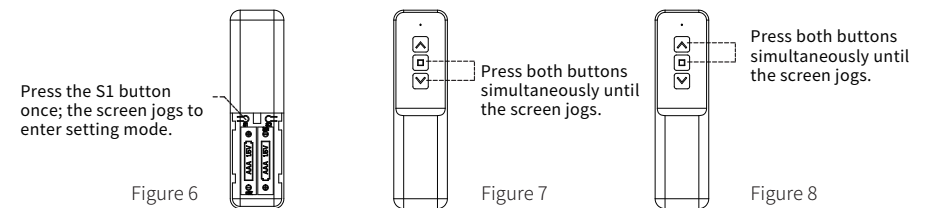

B. Infrared Remote Control

AC-127 Infrared Remote Transmitter Button Functions: (Figure9 -10)

1. "Up" button: Screen ascends.
2. "Stop" button: Screen stops.
3. "Down" button: Screen descends.
4. "Up Jog" button: Fine-tune screen ascent.
5. "Down Jog" button: Fine-tune screen descent.

