

Grandview

Instruction Manual for Cyber Series Recessed-Ceiling Screen

Format	Model	Specification (inch)	Viewing Area WxH(mm)	L (mm)	A (mm)	B1 (mm)	B2 (mm)	B3 (mm)	Package LxHxW(mm)	Net/Gross Weight(kg)
4:3	LF-MIRC(II)84	84	1707x1280	2326	2196	100	55	665	2431x260x226	32.6/35.8
	LF-MIRC(II)100	100	2032x1524	2651	2195	100	55	420	2756x260x226	35.9/39.9
	LF-MIRC(II)120	120	2438x1829	3057	2480	100	55	400	3162x260x226	40.4/44.8
16:9	LF-MIRC(II)77	77	1705x 959	2324	2195	100	55	985	2429x260x226	32.2/35.6
	LF-MIRC(II)80	80	1771x 996	2390	2197	100	55	950	2495x260x226	33.0/36.4
	LF-MIRC(II)92	92	2037x1146	2656	2197	100	55	800	2761x260x226	35.5/39.5
	LF-MIRC(II)100	100	2214x1245	2833	2196	100	55	700	2938x260x226	37.4/41.4
	LF-MIRC(II)106	106	2347x1320	2966	2196	100	55	625	3071x260x226	38.8/43.0
	LF-MIRC(II)120	120	2657x1494	3276	2195	100	55	450	3381x260x226	42.1/46.7
	LF-MIRC(II)100	100	2337x 995	2956	2201	100	55	955	3061x260x226	38.4/42.6
2.35:1	LF-MIRC(II)110	110	2571x1094	3190	2200	100	55	855	3295x260x226	40.7/45.2
	LF-MIRC(II)120	120	2805x1193	3424	2199	100	55	755	3529x260x226	43.2/48.0
	LF-MIRC(II)130	130	3038x1293	3657	2199	100	55	655	3767x260x226	49.2/54.3
	LF-MIRC(II)140	140	3272x1392	3891	2198	100	55	555	4001x260x226	52.0/57.2

Note:

- Due to product updates, sizes and specifications are subject to change at any time.
The tolerance for L is approximately ± 5 mm (3/16 inches).
- Actual dimension is measured by: total screen length L x end cap depth x end cap height.

Questions & Answers

Fabrics of Grandview motorized screen can be used for years, most problems are cost by simple incidents. If problem occurs, please find the list below for some common solutions. If problems keep on, please contact authorized agent of Grandview or call service number: (8620)34806166

	Reason	Solution
Screen responds nothing to any operation	Battery mis-installed or powerless	Please check about the batteries as instruction manual.
	Power line disconnection	Please connect the power line as instruction manual.

One year warranty

Grandview provides one year warranty for motorized screen. Contents of warranty include replacement of spare parts while problems occur with correct operation. Not include inappropriately operating the screen or uninstall the screen by self. You should reserve in advance for the repair with Grandview or appointed service center.



Model : CB-MIRC (II) or LF-MIRC (II)

Thank you for purchasing a Grandview projection screen.
Before use, please read instructions carefully. After installation, store instructions for future reference.

Caution

- Warnings:** Please prevent screen from wet place to avoid electric or fire dangerous.
- 1. Please read carefully with this instructions before installation to avoid damage to product causing by inappropriate installation or operation.
 - 2. Please keep the screen away from hot sources, such as radiator, heating machine, fireplace, loudspeaker or other relative device.
 - 3. Only Plug with ground wire is acceptable.
 - 4. Only accessories from authorized supplier is acceptable.
 - 5. Please unplug the power wire when lighting and raining or not use with a long time.
 - 6. Please contact the professional for installation and repairing.
 - 7. Please prevent screen from wet and water .
 - 8. As soon as the plug of the screen is connected to the power source, the screen is connecting with electricity.
 - 9. Please use the approved power line (three-core power line)/ device interface/power plug.
 - 10. Please use the rating (voltage, amps) power line (three-core power line) / device interface/power plug. If have any questions about power line/ device interface/power plug, please contact the professional people.
 - 11. After installation, please locate a power device in order to disconnect power or connect the power plug to electrical socket. This electrical socket should be installed to a convenient position. If the accident occurs during operation, please disconnect power or take out the power plug.
 - 12. The ceiling or wall used for fixture installation must be secure enough; load-bearing requirement must be 4 times of the screen to prevent the screens from falling.
 - 13. Before using, please remove the fixation strap and screws from the low bar to avoid the damage of product.

Warnings

To prevent from electric dangerous, please don't remove the end cap. There is no need for users to check the parts inside, please handle the problems to professional repairman.



Please notice the non-insulated voltage of the spare parts to prevent from electric dangerous.




Please operate according to the user manual with the screen.

- (1) For adjusting the viewing area, please insert the adjustment to regulate adjustment hole. A clockwise adjustment will increase the viewing area for about 13mm.
- Note: After pressing the up button, you will need a few seconds to see the adjustment of screen; and after pressing the down button, you will see the position changed of screen.
- Please do not operate the following step before step1 to avoid damages of screen.
- (2) A counterclockwise cycle can adjust the distance to 13mm between casing and rod.

Please be careful while operating, too much retracting will cause the damages of screen and motor.

Product Specifications

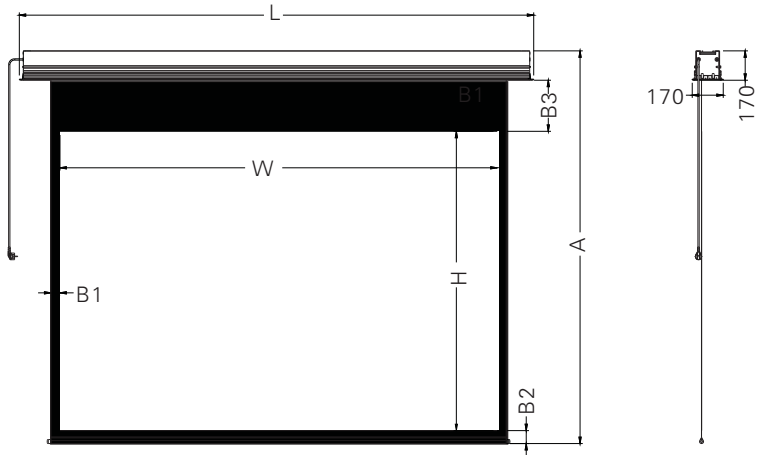


Format	Model	Specification (inch)	Viewing Area WxH(mm)	L (mm)	A (mm)	B1 (mm)	B2 (mm)	B3 (mm)	Package LxHxW(mm)	Net/Gross Weight(kg)
4:3	CB-MIRC(II)72	72	1463x1097	1852	2158	30	50	850	1913x260x226	24.8/27.8
	CB-MIRC(II)84	84	1707x1280	2136	2161	50	50	670	2197x260x226	29.4/32.6
	CB-MIRC(II)100	100	2032x1524	2461	2155	50	50	420	2522x260x226	32.7/36.3
	CB-MIRC(II)120	120	2438x1829	2867	2160	50	50	120	2928x260x226	36.3/40.4
16:9	CB-MIRC(II)77	77	1705x 959	2134	2160	50	50	990	2195x260x226	29.9/33.2
	CB-MIRC(II)80	80	1771x 996	2156	2157	28	50	950	2217x260x226	30.2/33.5
	CB-MIRC(II)92	92	2037x1146	2466	2157	50	50	800	2527x260x226	33.1/36.6
	CB-MIRC(II)100	100	2214x1245	2643	2156	50	50	700	2704x260x226	34.7/38.5
	CB-MIRC(II)106	106	2347x1320	2776	2161	50	50	630	2837x260x226	36.0/39.8
	CB-MIRC(II)120	120	2657x1494	3086	2155	50	50	450	3147x260x226	39.1/43.5

- Note:
- 1. Due to product updates, sizes and specifications are subject to change at any time. The tolerance for L is approximately ± 5 mm (3/16 inches).
 - 2. Actual dimension is measured by: total screen length L x end cap depth x end cap height.


D. External Wall Switch (optional)

The wall switch is available for a fixed location. Please connect RJ11 plug to EXTCTRL input on the screen.
Note: please use a cord for a far location.

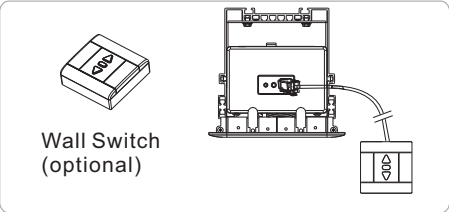

E. Synchro Power Relay(optional)

After connecting the Wireless Synchro Converter, the screen can be controlled by FM modulation wireless controller which can cooperate with Sychro Power Relay and switch of projector to control the up and down of screen synchronously.

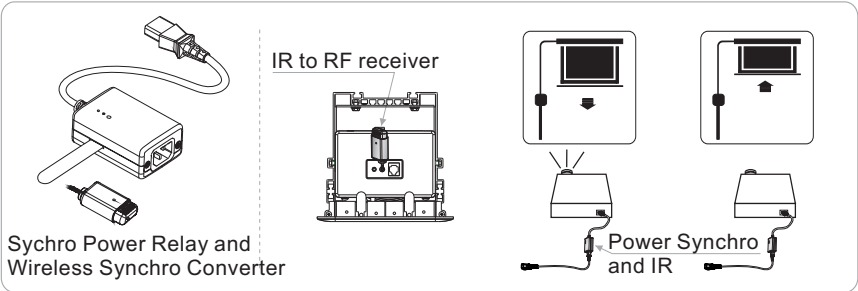


≡. Screen Adjustment

(Please take apart the baffle when adjusting the screen. And please reinstall the baffle after adjusting.)

Motor Positioning

Avoid the overheating of motor; please do not use the screen over 4 seconds for extending and retracting continuously. The motor needs 4 minutes to cold down and the motor do not need any lubricant. The standard factory setting of upper and lower limitation is perfect. To avoid the damage, please contact the professional people or local dealers for repairing.

Pleae adjust the motor adjusting slot using M4 allen key

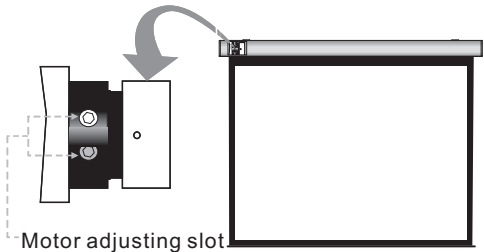

“Screen Extending” Adjustment

Operate the adjustment when the screen extends completely:

(1) For adjusting the viewing area, please insert the adjustment to regulate adjustment hole. A clockwise adjustment will increase the viewing area for about 13mm.

Note: After pressing the “Up” button, you will need a few seconds to see the adjustment of screen; and after pressing the “down” button, you will see the position changed of screen.

(2) With the over-adjustment, a counter-clockwise adjustment will return the screen. This adjustment can be operated when the screen stops at the lowest postion without controlling.

⚠ Please be careful while operating, too much retracting will cause the damages of screen and motor.


“Screen Retracting” Adjustment

Reference:


(Note: This adjustment is not safety, please contact the professional people for repairing and avoid damaging of screen and warranty failure)

“Caution” we strongly recommend that do not regulate the screen limitation privately. The standard limitation of screen is set from the factory and this standard can satisfy the requirement of users.

Description

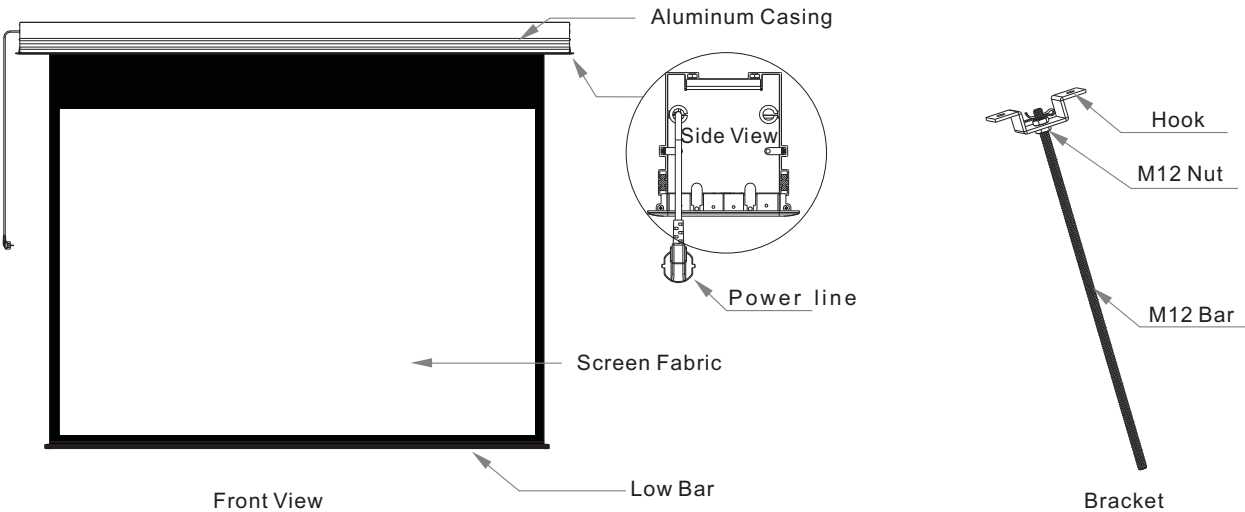


Accessories

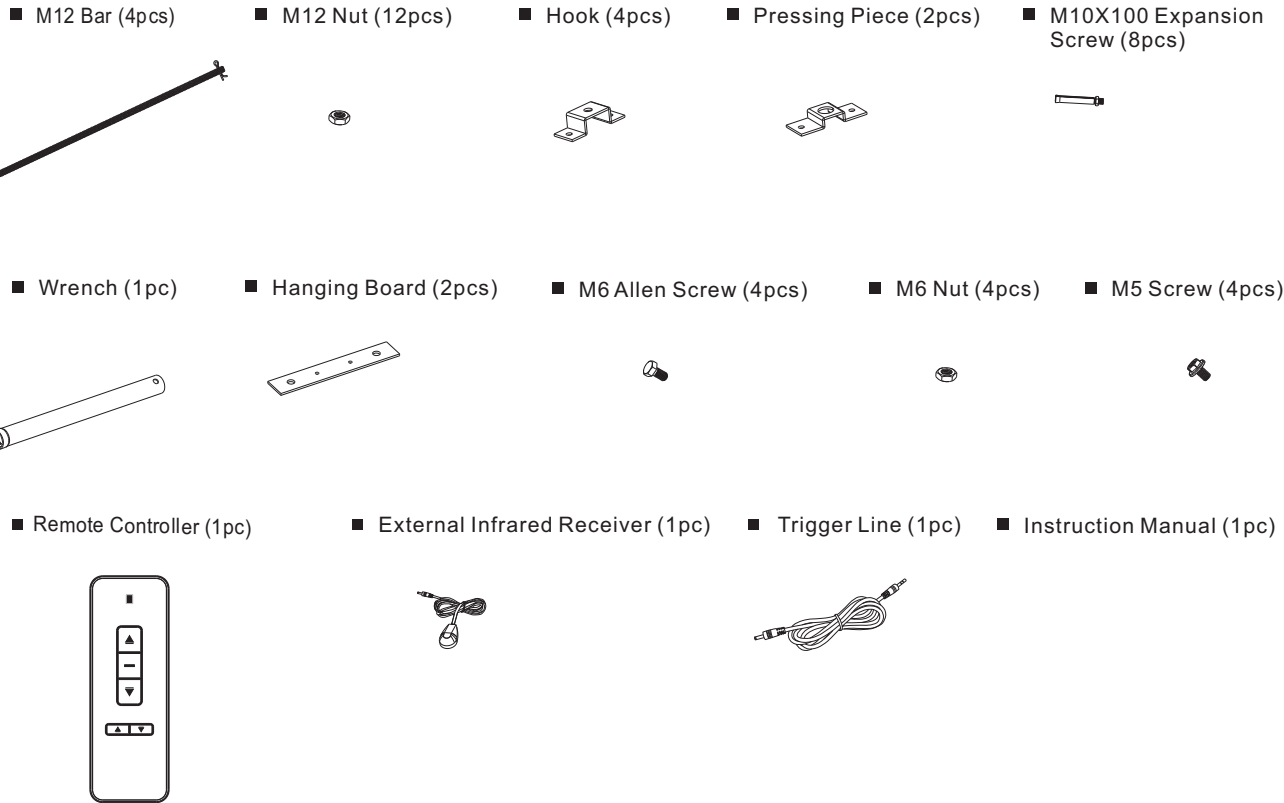

Installation Instruction

This screen needs to be recessed into the ceiling, and this instruction manual shows us the grille-ceiling and wood-ceiling as example. Please install the screen according to different applications. This screen needs to be recessed at the best viewing angle in order to improve the image. Take out all the parts from the packaging and follow the accessories guideline to ensure you have all parts.

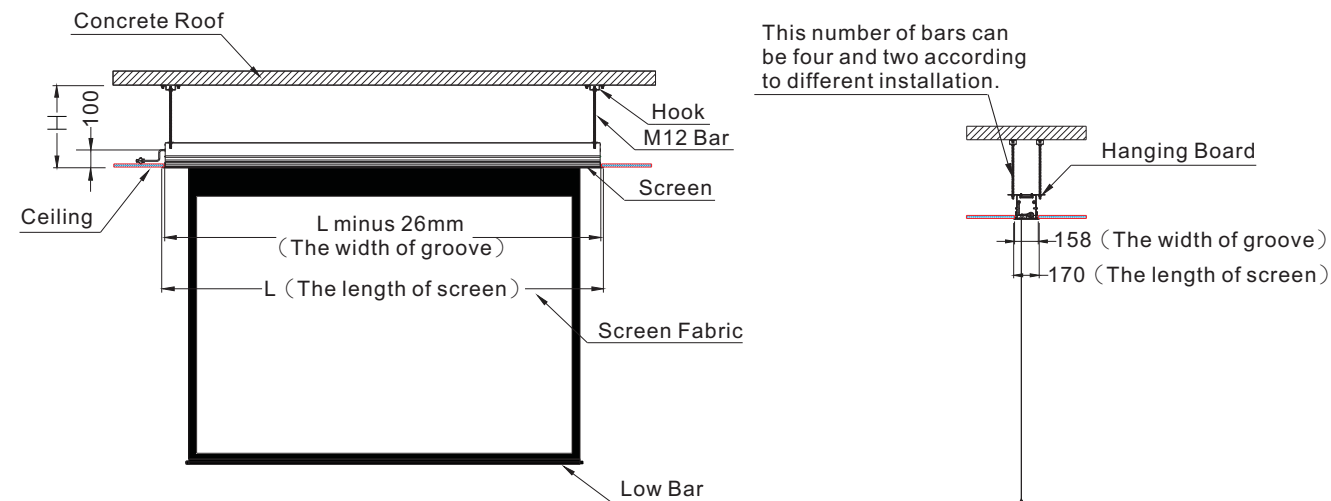

一. Grille-Ceiling Mount

1. Choose a position according to the required space, and then take apart the ceiling (figure 1). Please measure the distance H between concrete roof and ceiling surface correctly (figure 2).

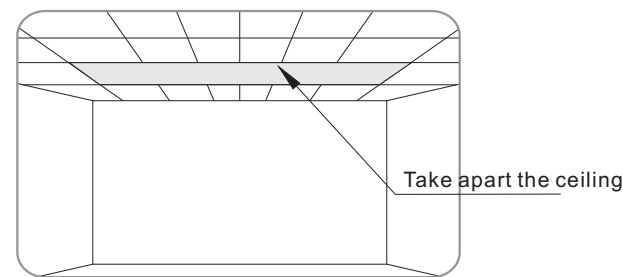


Figure 1

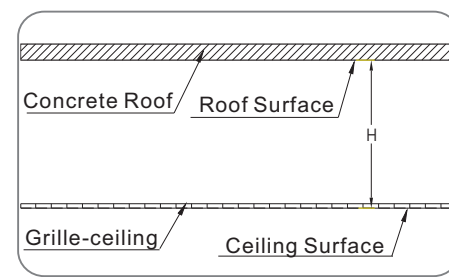


Figure 2

2. This screen equips bracket, and build up the hanging bracket using the hook, M12 nut and M12 bar. Cut the length of M12 bar to H minus 100mm (H is the distance between concrete roof and ceiling surface) (Note: H is 500mm, the length of hanging bracket is 400mm which is 500mm minus 100mm) (figure 3).


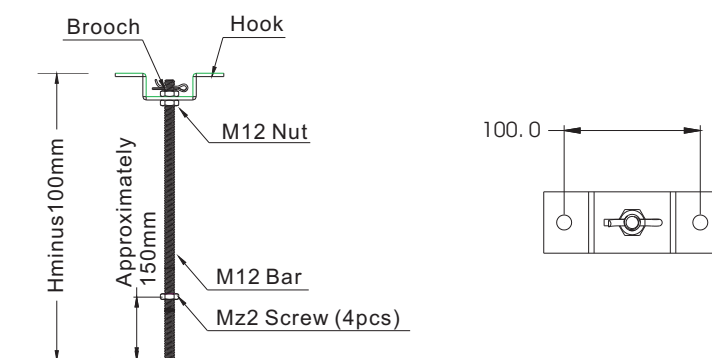


figure 3

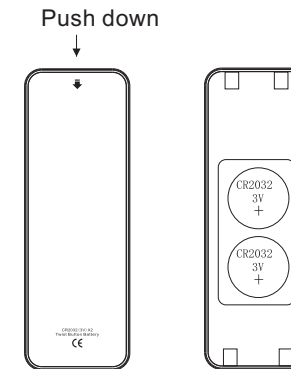

Batteries Installation Instruction:


When the signal of the Controller is faint, please replace the batteries as follow steps:

1. Reverse Controller to the back, push down as the arrow mark to open the cover.
2. Install two cells of battery and set the direction of positive and negative electrode just like the chart shows.
3. Close the battery cover.

二. External Control System



Four control systems are available for motorized screen

- (1) Manual Control
- (2) Infrared Remote Control (IR)
- (3) Dry Contact
- (4) Switch

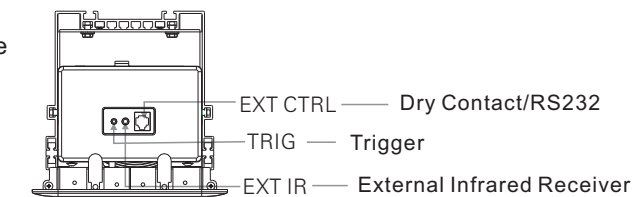

A. Manual Control:


The manual control button is under power box:
(Close to power line) Cyclic Control

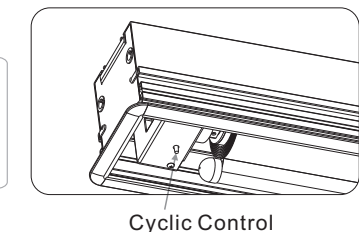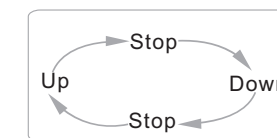

Cyclic Control

B. Infrared Remote Control:


Because of the recessed mount, the external infrared EXT Ir input must be inserted by external infrared receiver, then please fix it in eyes for control.

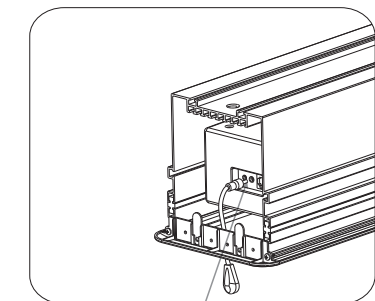

External Infrared Input

C. Trigger :

1. Please connect 2.5mm plug of trigger to the TRIG input on the screen; connect 3.5mm plug to the output on trigger (only for the equipments which have trigger function)
2. The projection screen will automatically lower when the projector is on. It will automatically retract when the projector is turned off

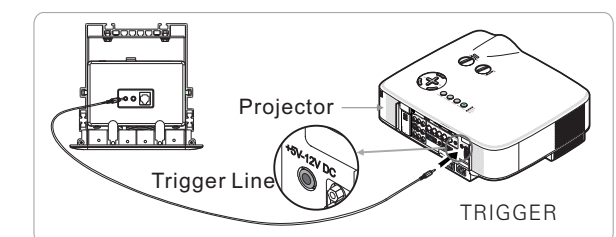

11. Installation Completed (figure 27).

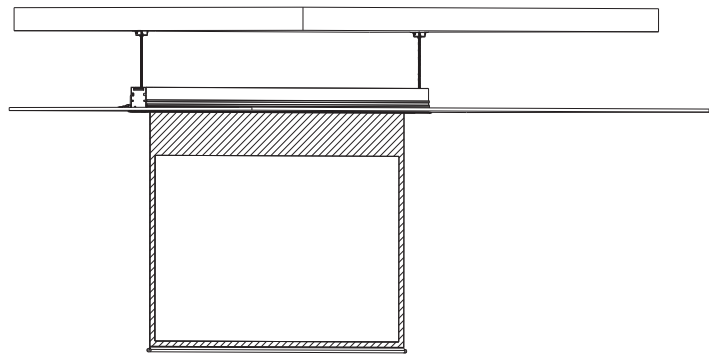


Figure27

Note: the upward instructions are only suitable for the distance H which between 230-600mm; if the distance is greater than 600mm, please follow the steps as below:

- 1)Install the hanging bracket at a required position before ceiling fitment (M12 bar is not provided) (figure 28).
- 2)Saw an oblong groove at a completed ceiling (note: please ensure the hanging bracket must be installed in the middle of this groove) (figure 29). The rest of steps can follow the instructions as before!

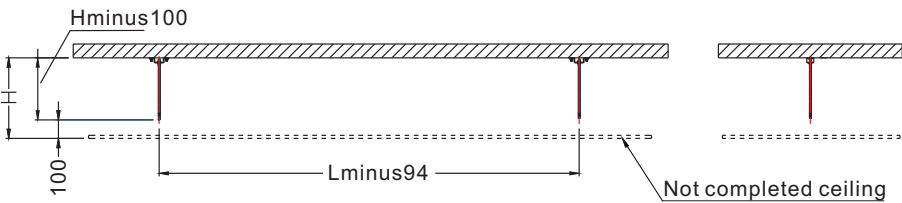


Figure28

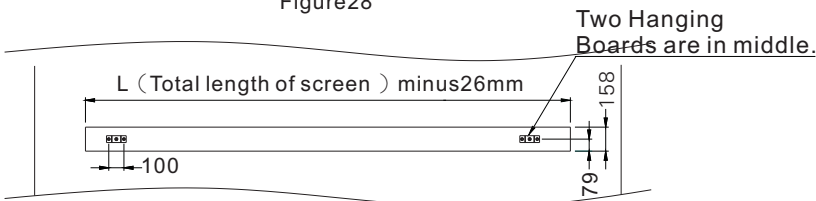


Figure29

- 3.Please measure the security distance between hanging brackets (figure 4), and fix the hanging brackets on the ceiling using expansion screws (figure 5).

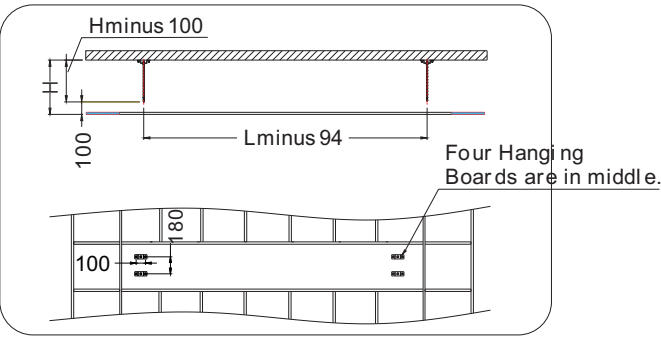


figure 4

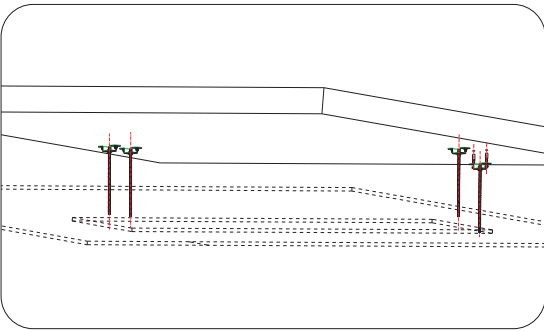


figure 5

- 4, Please follow the below steps to install the power cord which recessing in casing, and plug in the external infrared receiver (because of the recessed mount, the external infrared receiver must be ready for control).
- 1)Take out the power cord (figure 6).
- 2)Loose the screws of power box and take out the power box (note: the power box must be buttoned on the hanger of bracket according to figure 11, please put up and move back the power box to take out), because the power cord has a limit, please do not draw it strongly.
- 3)Loose and take out two rubber screws, then remove the end cap (figure 8-9).
- 4)Remove the line cover of end cap, then fill in the power line. Afterward, stuck the line cover back to end cap, then install the power line outside the casing.
- 5)Install the end cap again (figure 10)
- 6)Insert the external infrared receiver to EXT IR hole (figure 10) (note: please put the completed external infrared receiver into inside frame of screen to avoid the pressing from screen). Then install the power box back to bracket (note: ensure the power box is buttoned on the hanger of bracket) (figure 11).

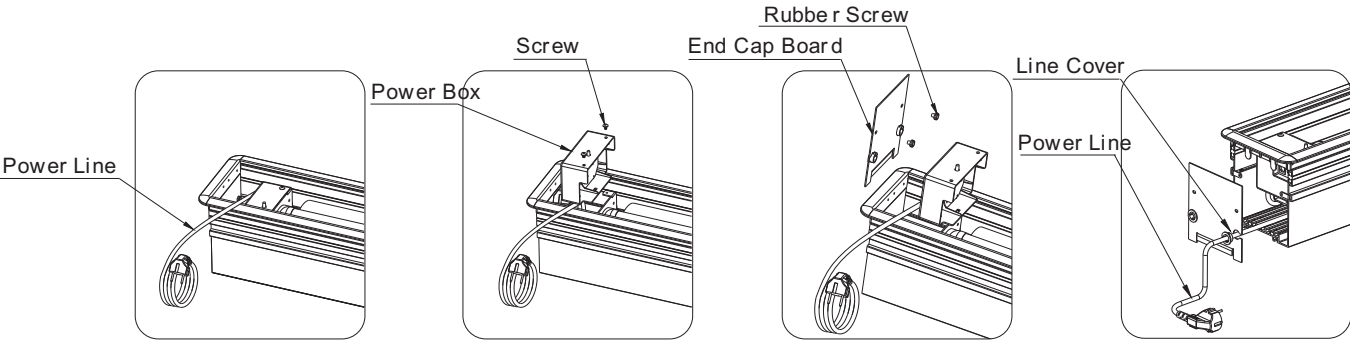


Figure6

Figure7

Figure8

Figure9


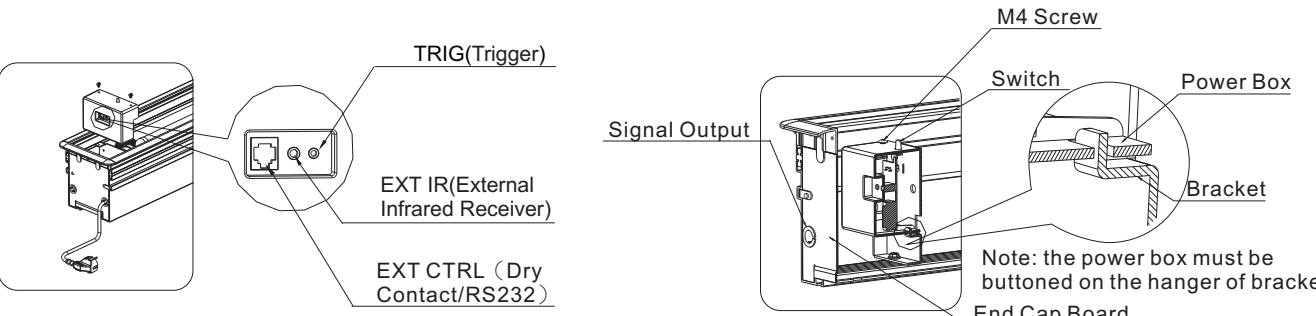


Figure 10

Figure 11

Product Instruction

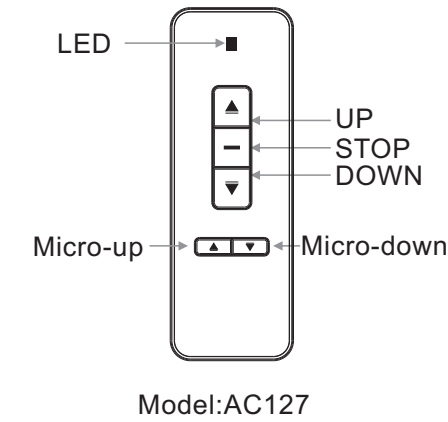


Button Function and Operation Instruction :

- 1.Press UP button to lift the screen
- 2.Press STOP button to stop the screen
- 3.Press DOWN button to lower the screen
- 4.Press MICRO-UP button to retract the screen in small increments(150ms for each movement)
- 5.Press MICRO-DOWN button to lower the screen in small increments (150ms for each movement)


Cautions:

- 1.The minimum distance between Controller and Receiver: 50cm
- 2.Workable within 8m in horizontal direction from the Receiver to the Controller
- 3.Do not cover the Controller's launching port while operation
- 4.Strictly ban operation in wet or high temperature environment.
- 5.Replacing batteries when the signal is faint or no signal.
- 6.Batteries for the Controller: 2 units CR2032 button cells.


5. Please stay the screen in the opposite direction, and fix the left and right hanging board on the screen using M6 screw and nut (figure 12).

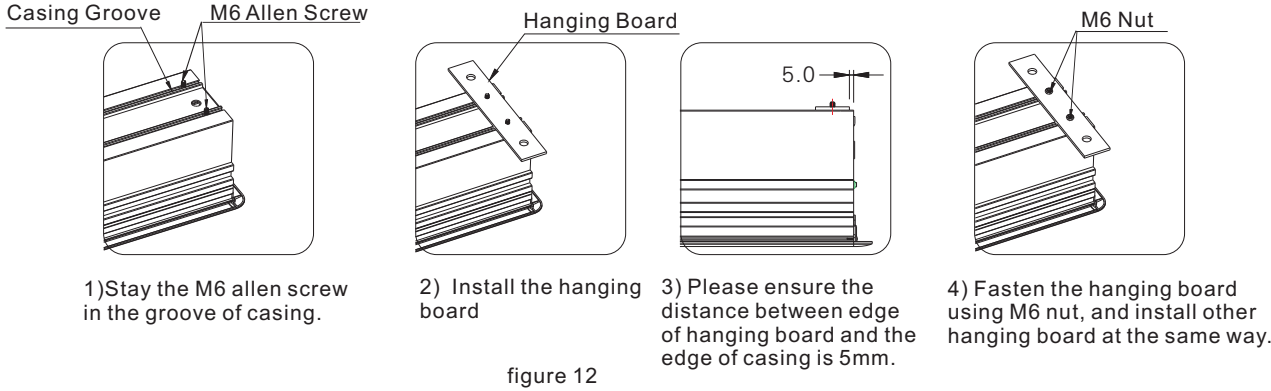


6. Install the whole screen on the hanging bracket (figure 13-14)

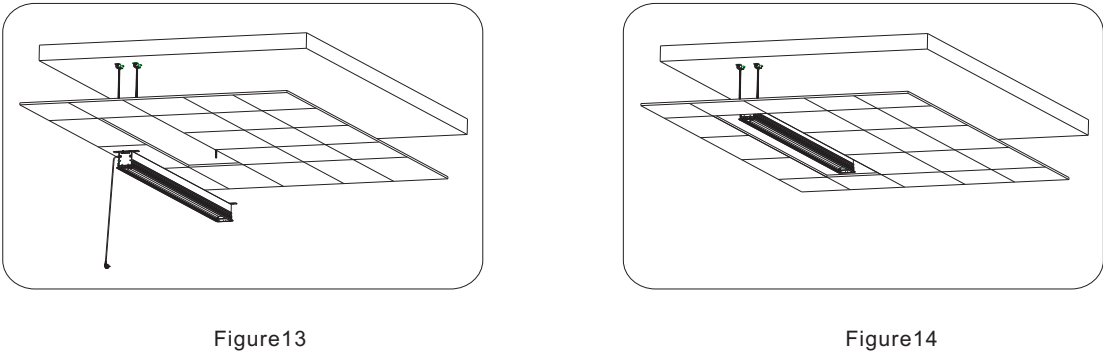

7. Fix the screen using M12 nut (figure 15), then adjust the security distance to H (the distance between concrete roof and ceiling surface) using adjusting screw. Loose the M12 nut and fix the whole screen, and then connect the power (figure 16).

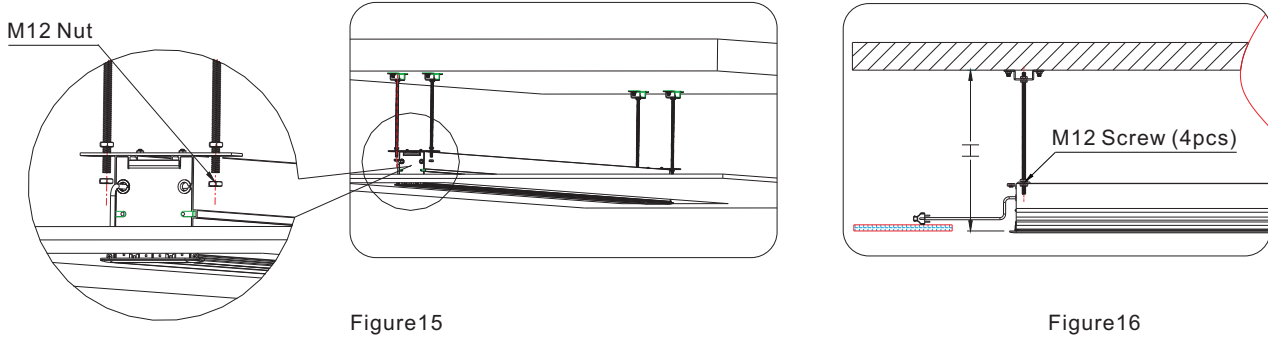


8. Cut the separated ceiling board in a suitable size, which can fill in the size of space as screen (figure 17-18).

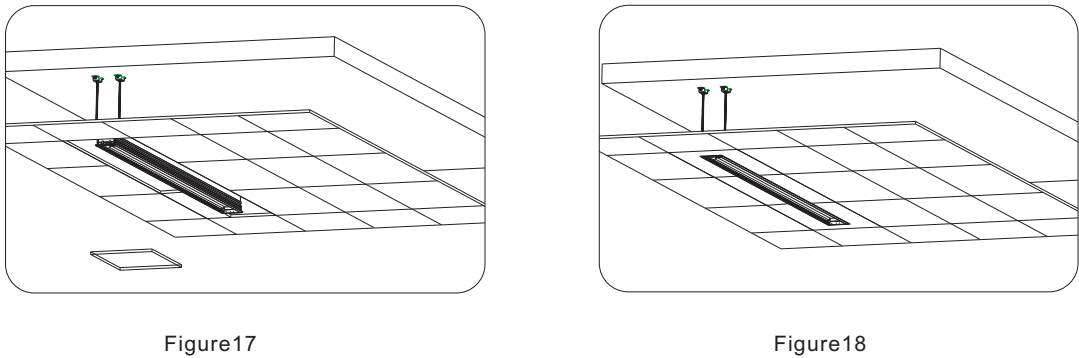




Note: the upward instruction shows us installation of external control system, if the users want to add other control systems, please follow the steps as below:

- 1) Loose the screws of power box and take out the power box (because the power cord has a limit, please do not draw it strongly). Then loose two rubber screws again, and remove the end cap (please ensure the power line is fixed), step 3 can be follow.
- 2) Insert the control system signal line to corresponding output (figure 11), and take out the signal line from control system signal line exit (figure 19).
- 3) Reinstall the end cap after completed control system and fasten the two rubber screws then reinstall the power box and fasten two screws according to step 8.


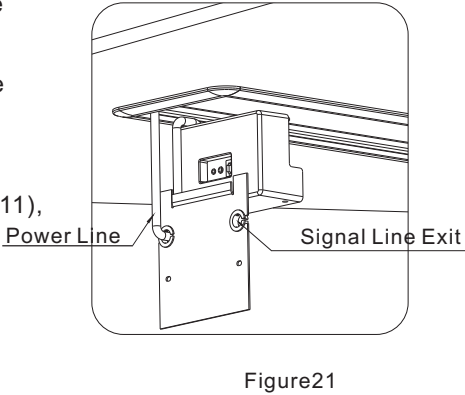


10. Install the front baffle as following steps


- 1) Extend the screen and keep the rear baffle opening
- 2) Disconnect the power of screen, and then install the front baffle
- 3) Please ensure the security lock is unlocked (figure 22).
- 4) Install the front baffle (figure 23)
- 5) Unlock the security lock of baffle (figure 24、figure 25), insert the plug of security to a hole of end cap (figure 26), if the baffle can not move up that please align baffle with ceiling board.
- 6) Connect the power after installation

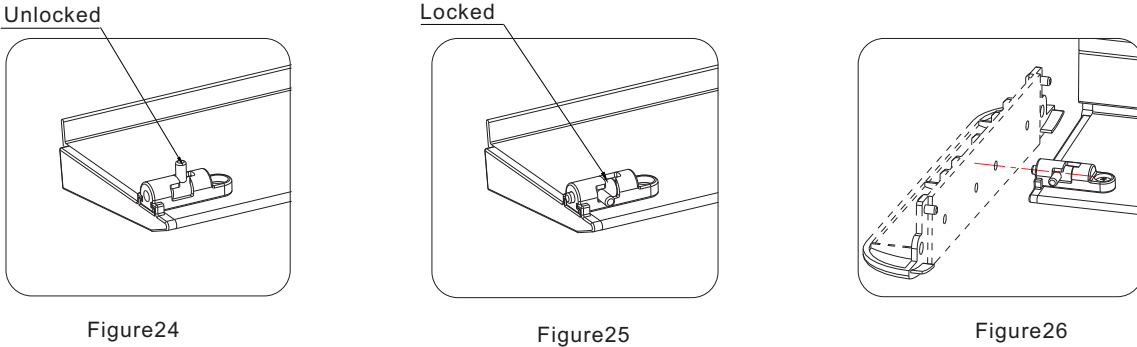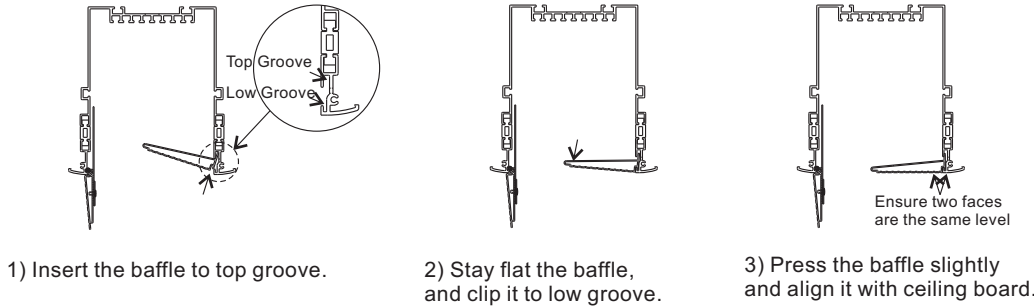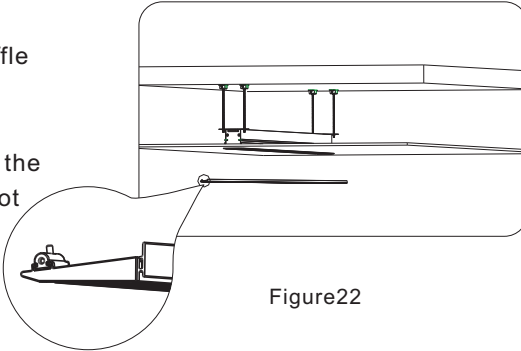


6. Fix the screen using M12 nut, then fasten the nut by wrench (accessories) (figure 13-14); until the ornament board align the ceiling (figure 15) and connect the power.

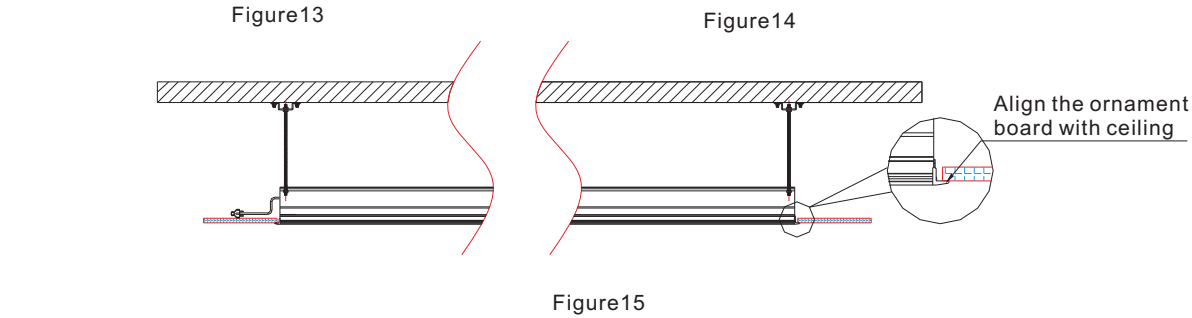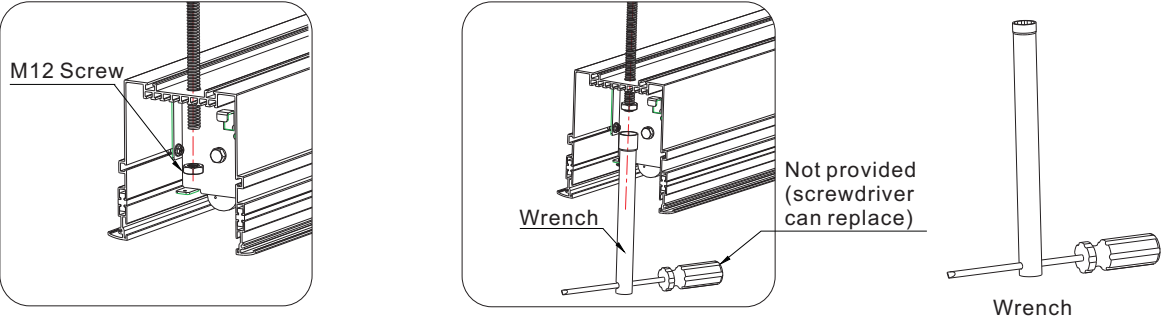

7. Please ensure the hexagon surface of nut and inside surface of casing are at the same level (figure 16); stay the pressing piece on the nut (figure 17-18)

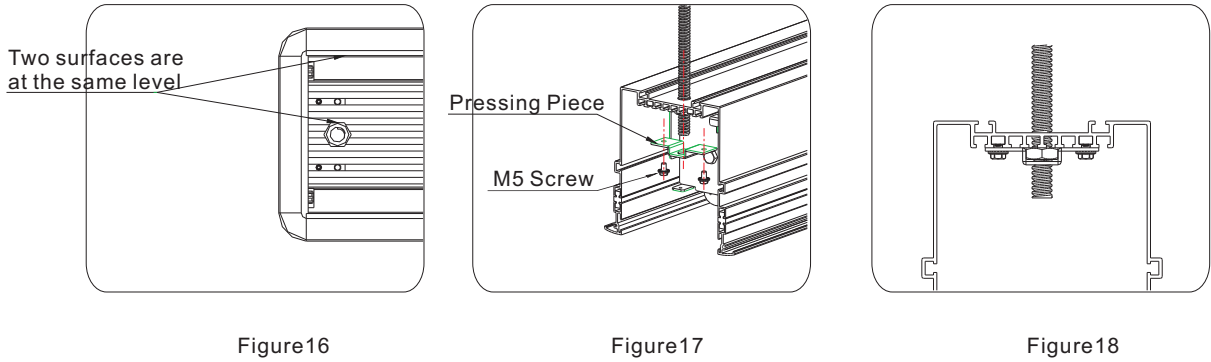


8. Insert the external infrared receiver to EXT IR hole (figure 18), because of the recessed mount, the external infrared receiver must be ready for control, then install the power box back to bracket (note: ensure the power box is buttoned on the hanger of bracket) (figure 19).

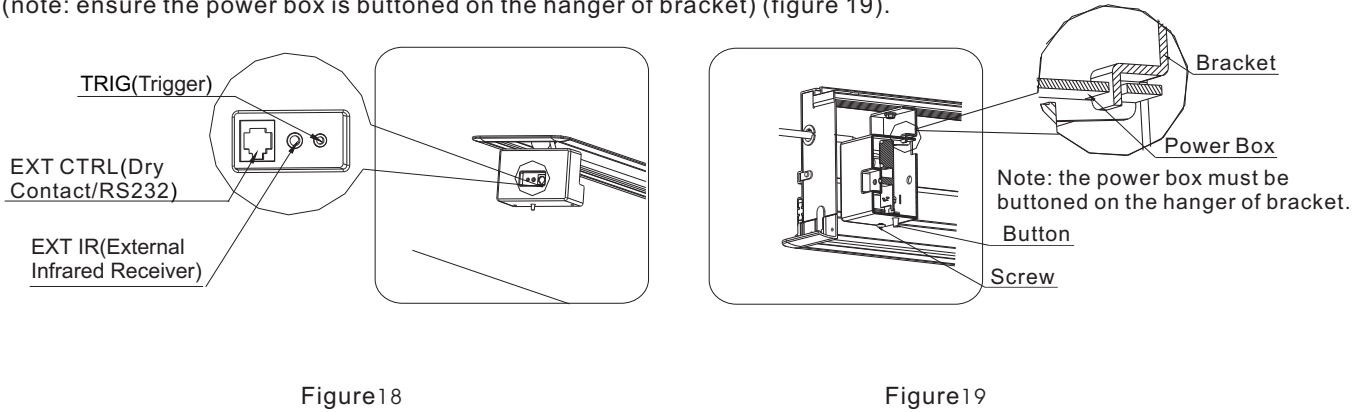




Note: the upward instruction shows us installation of external control system, if the users want to add other control systems, please follow the steps as below:

- 1) Loose the screws of power box and take out the power box (because the power cord has a limit, please do not draw it strongly). Then loose two rubber screws again, and remove the end cap (please ensure the power line is fixed), step 3 can be follow.
- 2) Insert the control system signal line to corresponding output (figure 11), and take out the signal line from control system signal line exit (figure 18).
- 3) Reinstall the end cap after completed control system and fasten the two rubber screws then reinstall the power box and fasten two screws according to step 4.

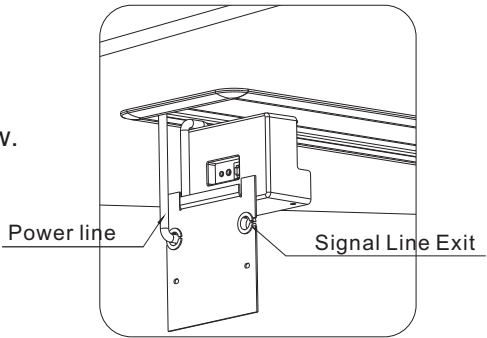

10. Install the front baffle as following steps

- 1) Extend the screen and keep the rear baffle opening
- 2) Disconnect the power of screen, and then install the front baffle
- 3) Please ensure the security lock is unlocked (figure 22).
- 4) Install the front baffle (figure 23)
- 5) Unlock the security lock of baffle (figure 24、figure 25), insert the plug of security to a hole of end cap (figure 26), if the baffle can not move up that please align baffle with ceiling board.
- 6) Connect the power after installation

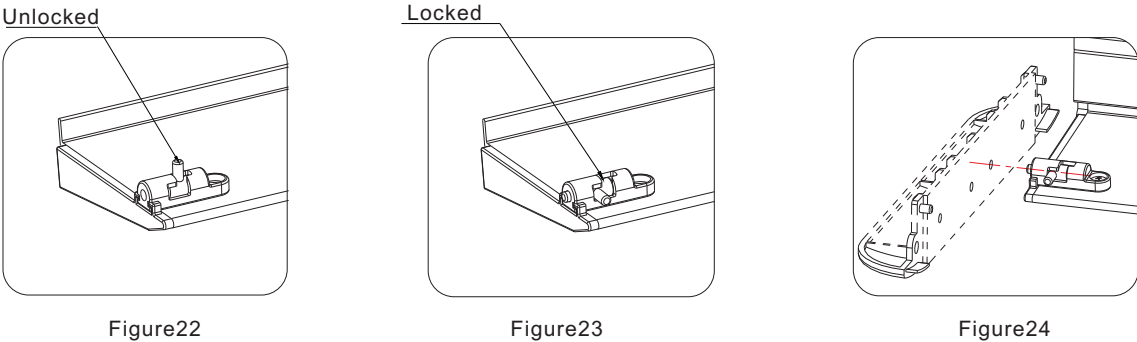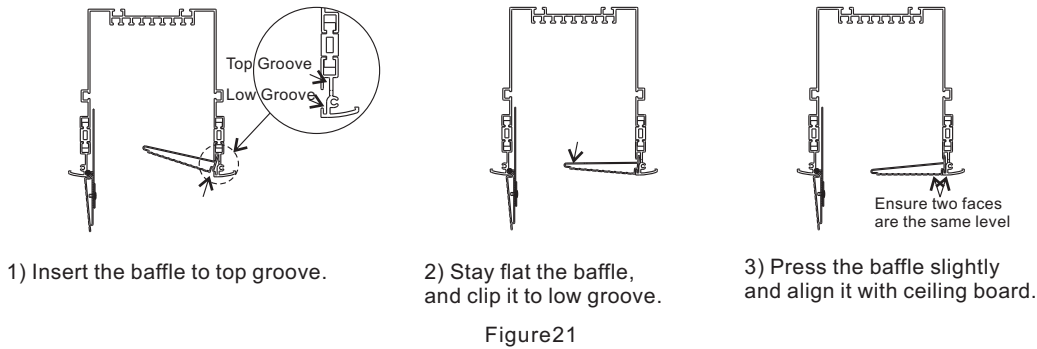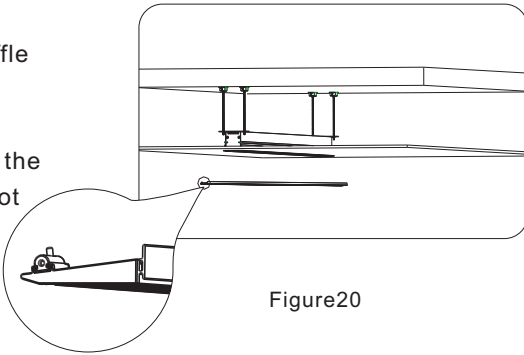

11. Installation Completed (figure 25).

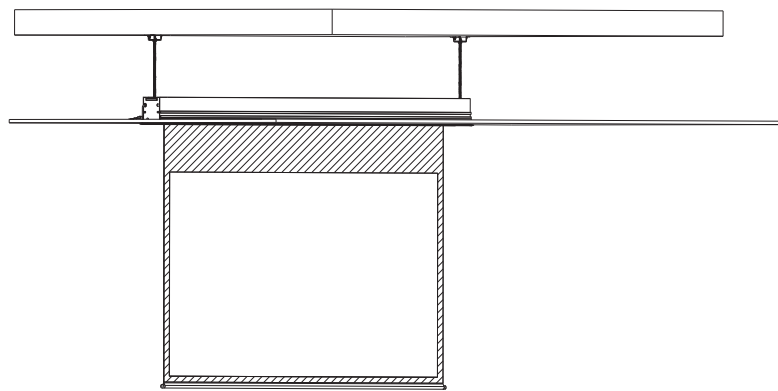


Figure25

.Note: the length of M12 bar is 500mm. Please prepare the bar your self if the distance H (between concrete roof and ceiling) is longer than 600mm.

二. Wood Ceiling

1. Saw an oblong groove at a required position (figure 1); Please measure the distance H between concrete roof and ceiling surface correctly (figure 2).

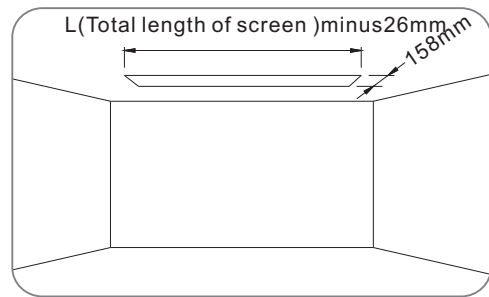


Figure1

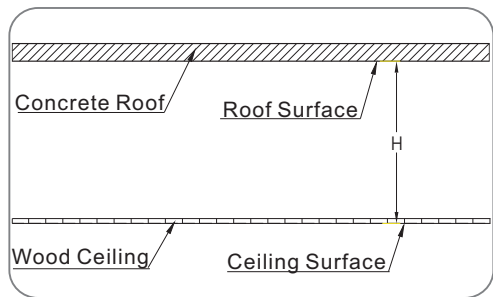


Figure2

2.This screen equips bracket, and build up the hanging bracket using the hook, M12 nut and M12 bar. Cut the length of M12 bar to H minus 100mm(H is the distance between concrete roof and ceiling surface) (Note: H is 500mm, the length of hanging bracket is 400m which is 500mm minus 100mm) (figure 3).

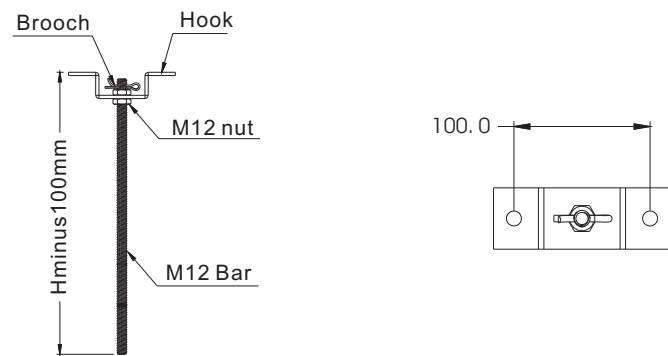


Figure 3

3.Please measure the security distance between hanging brackets (figure 4), and fix the hanging brackets on the ceiling using expansion screws (figure 5).

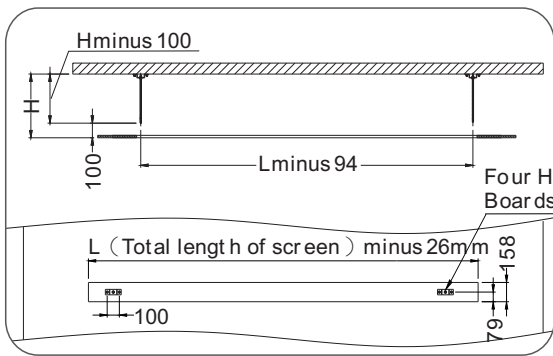


Figure 4

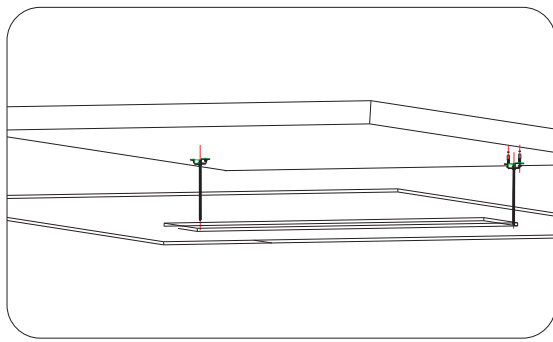


Figure 5

4, Please follow the below steps to install the power cord which recessing in casing .

- 1)Take out the power cord (figure 6).
- 2)Loose the screws of power box and take out the power box (note: the power box must be buttoned on the hanger of bracket according to figure 11, please put up and move back the power box to take out), because the power cord has a limit, please do not draw it strongly.
- 3)Loose and take out two rubber screws, then remove the end cap (figure 8).
- 4)Remove the line cover of end cap, and then fill in the power line. Afterward, stuck the line cover back to end cap, then install the power line outside the casing (figure 9)
- 5) Please complete the installation of end cap and fasten two rubber screws; do not need to install the power box at this moment.

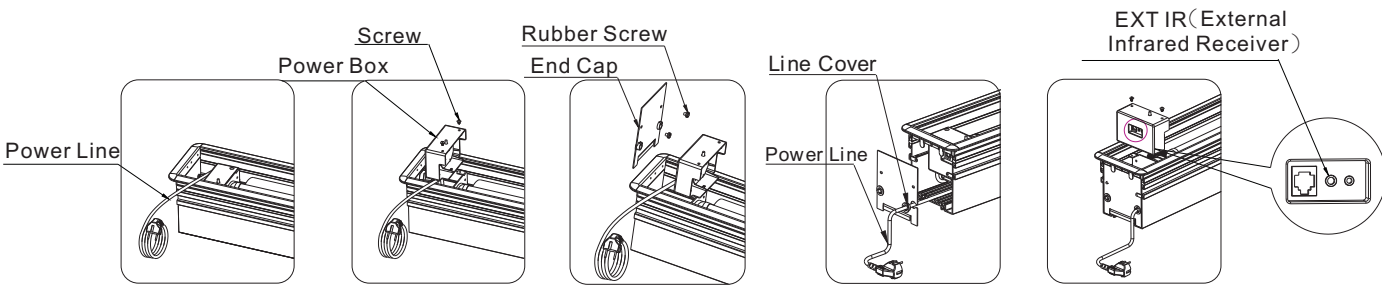


Figure6

Figure7

Figure8

Figure9

Figure10

5. Install the whole screen on the hanging bracket (figure 11-12)

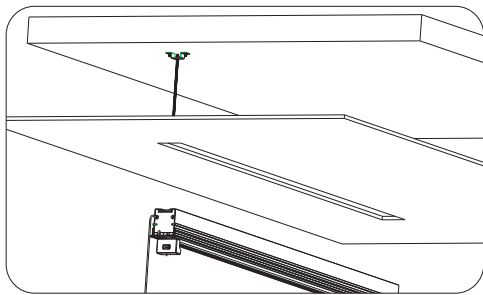


Figure11

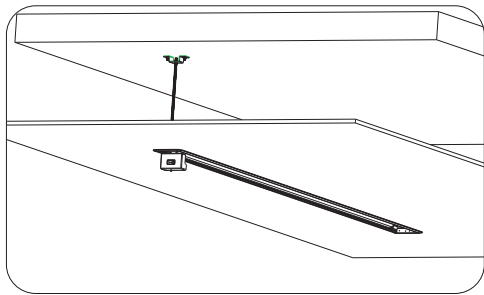


Figure12